

삼성전자주식회사

94-1



A/S 1588-7285 ()
1588-3366

(가 ,)
114
1566-0011 (011, 017)
1566-2011



02-541-3000, 080-022-3000
051-861-3000, 080-051-3000



<http://www.sec.co.kr>
<http://www.anycall.com>



A/S 가 가

GH68-03679A
2003/5. Rev.1.0

삼성애니콜cdma2000

SCH-X800

AnycallLAND
www.anycall.com Manual Bank



for Foreigner see page 185



()' (173)

가

가



가



가

가



(RF)
가



가



가

(,)



TTA Certified ()



가





1		
1:	65
2:	70
3:	70
4:	70
5:	62
6:	71
7:	73
8:	75
9:	77
#:	77

2		
1: /	80
2: /	81
3:	82
4:	82
5:	83
6:	84

3	/	
1:NATE	86
NATE	Playon	
Playon	E-mail	
2:	93
3:E-mail	113
E-mail	E-mail	
4:	119
5:NATE		120

4		
1:	122
2:	123
3:	125
4:	126
5:	127

5		
1:	131
2:	132

6		
1:	134
2:	135
3:	136
4:	140
5:	142
6:	143
7:D-DAY	144
8:	146
9:	147

8		
1:	154
2:	155
3:	156
4:	157
5:	160
6:	161
7:	161
※:	162
#:	163



1:	46
2:	49
3:	53
4:	54
5:	55
6:	57
7: /Language	57
8:	58

1:	37
2:	37
3:	37
4:	37
5:	37
:DTMF	37



1

12 /
15
16
21
22
23

2

26
26
27
27
28
29
30
31
32

DTMF

3

4

32
33
34
35
36
36
36
36
37
37
37
37
40
40
41
43
44
46
46
48
48
49
49
50
51
51
52
53
54
55
55
56
56
57
57
58

5

58
59

가

114
/ /

62
62
63
64
65
65
66
66
67
67
68
68
69
70
71

71
72
72
72
73
73
74
74
75
75
76
76
77
77
80
81
82

7

NATE
NATE
Playon
Playon
Playon
Playon
E-mail

82
83
84
86
86
87
88
88
88
89
90
91
92
93
93
94
95

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13

NATE Air
가

95		110	CA	127
96		111		127
96		112		
97	E-mail	113		
98	NATE	113	9	
99	E-mail	114		131
100		117		132
100	E-mail	118		
101		119	10	
102	NATE	120		
103				134
104			8	
104				135
105		122		136
105		123		138
107		123		139
107	OK Cashbag	124		139
108		125		140
108		126		140
109		127		141

D-DAY
D-DAY
D-DAY
D-DAY

11
Push-Push II

141	12		166
142		700	166
143		PC	167
144		2000	168
144			170
145			173
145			179
146			180
147	/		181
147			183
148			
			185
		for Foreigner	186
		Your Phone	188
		Getting Started	191
		Basic Functions	194
		Menu Functions	
150			
151			
151			
151	13		
		NATE Drive (entrac)	165

MEMO

CDMA2000 ?

CDMA2000 3
IMT 2000

IS-95C IS-95A/B

95A/B (14.4~64 kbps)

(144 kbps)

. CDMA2000
가 2 가

, CDMA2000
IS-95A/B CDMA2000

 
,

.



사용하기 전에 미리 알아야 할
내용들을 설명합니다.


/

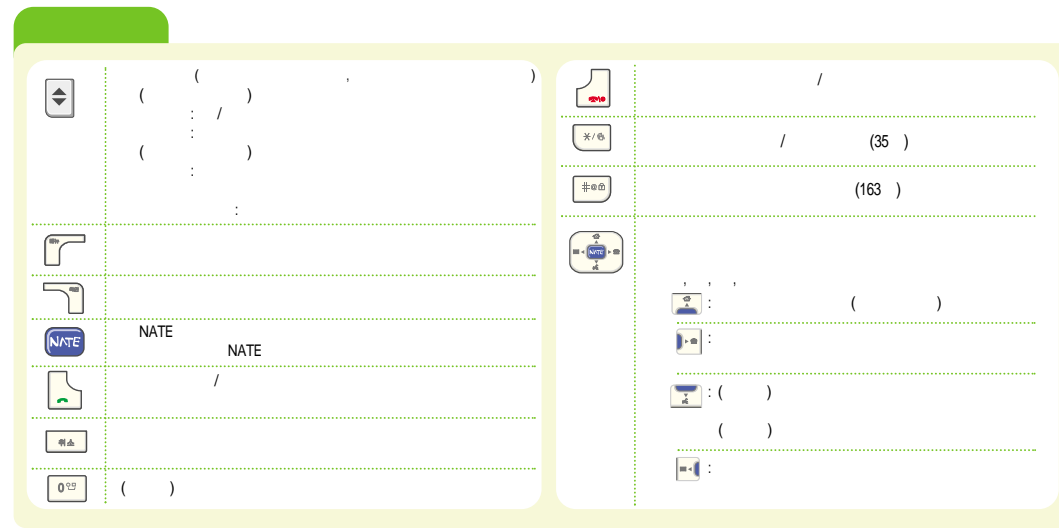



	가		가
	가		
	/		
	가		
			가
	가		

 158

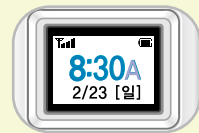


(56)

가

가

가

 
(157)



()










 
(19)

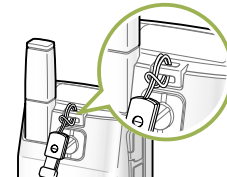

알아두기

        가

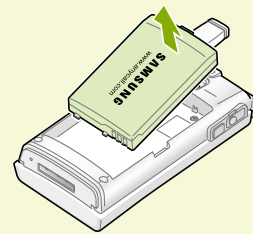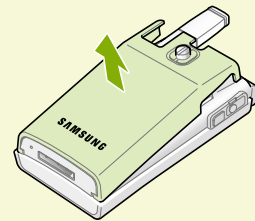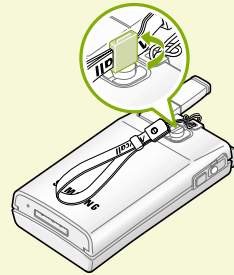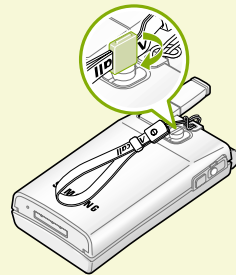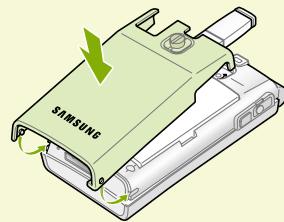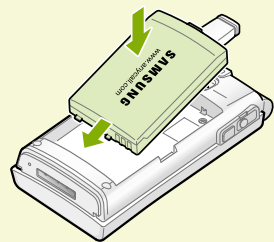

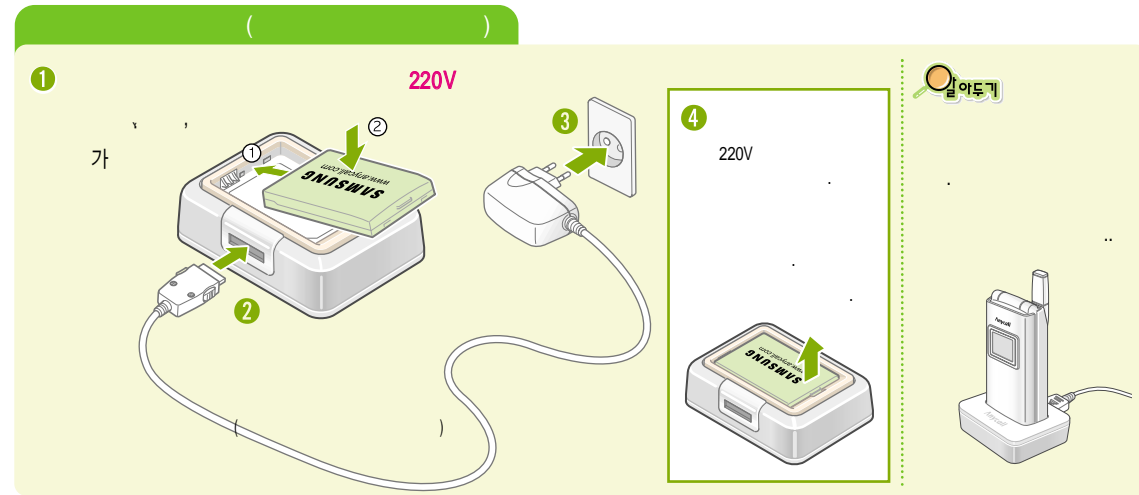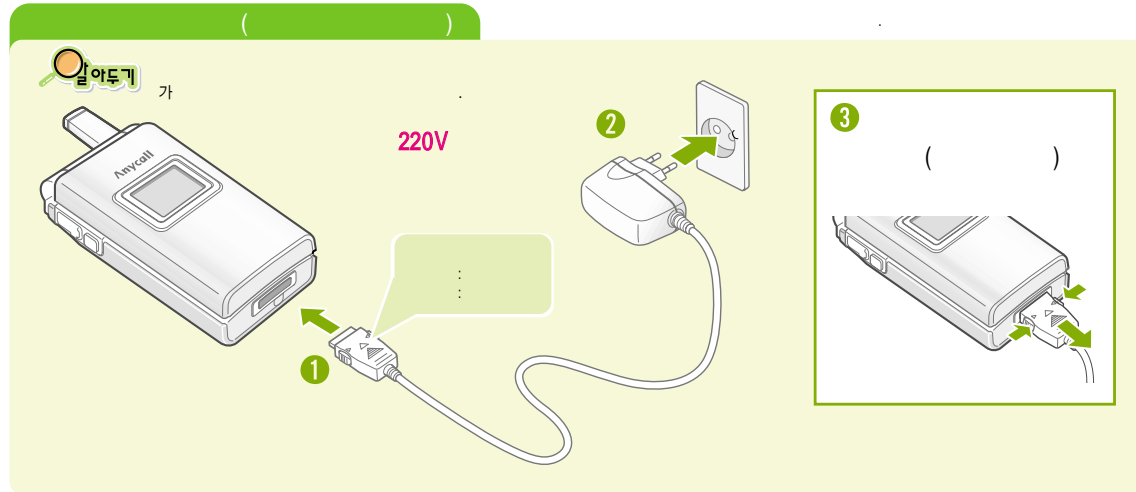

()



가

가



가

()

. (172)

 
()

/



가

가

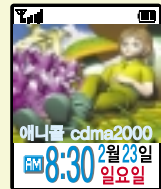

(가)

 
 


(82)

/

. (84)

가

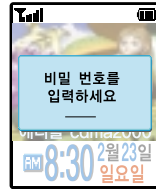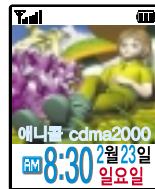

가

 
가

가



()
가

()

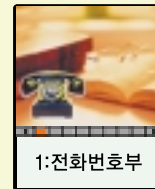



가


4



가

   
가

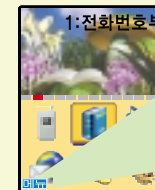

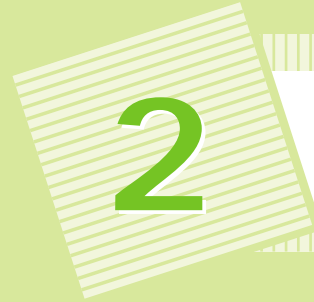

휴대폰에서 제공하는 다양한전화걸기 방법,
전화받는 방법, 통화중기능들을 설명합니다.

 26
32
35
36

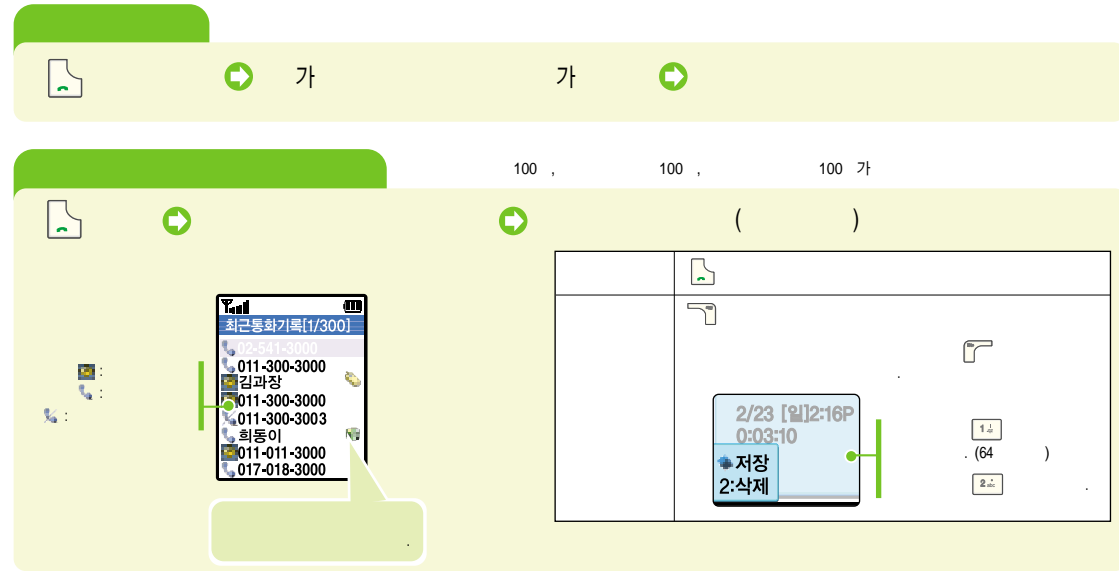

(001~009)

001

1

009

9

(000, 010~999)

000

0

0

023

2

3

255

2

5

 
 
5



2 가



가

가
가

가

3

131

 
 
1

 
 
(131)

5

200

(132)

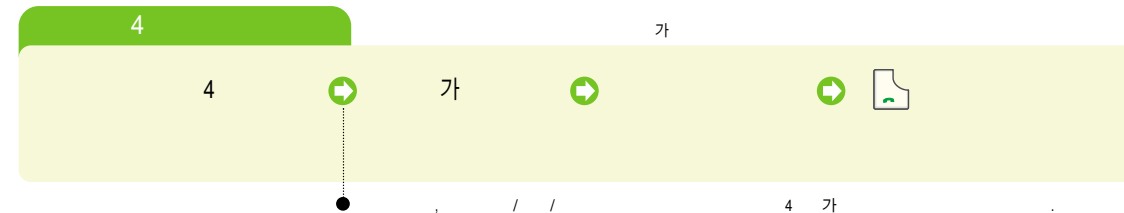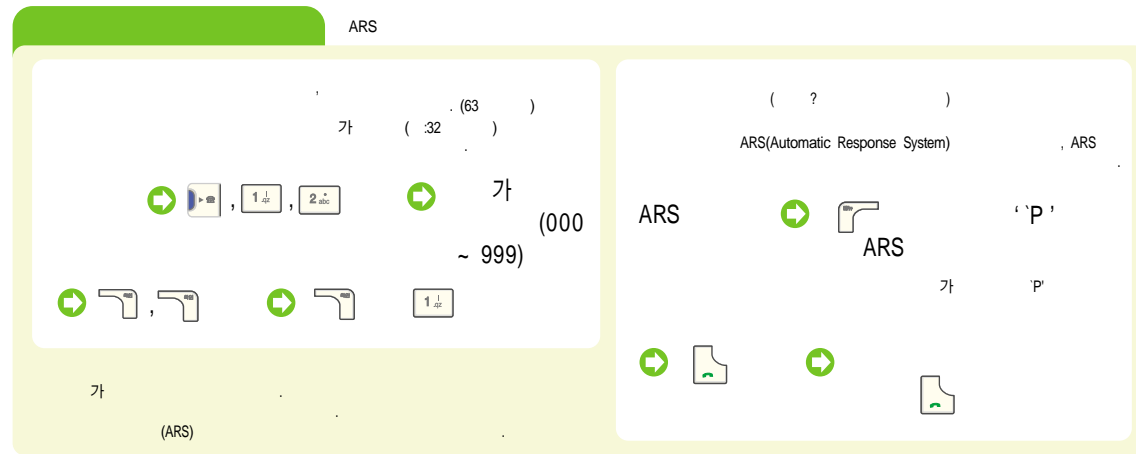

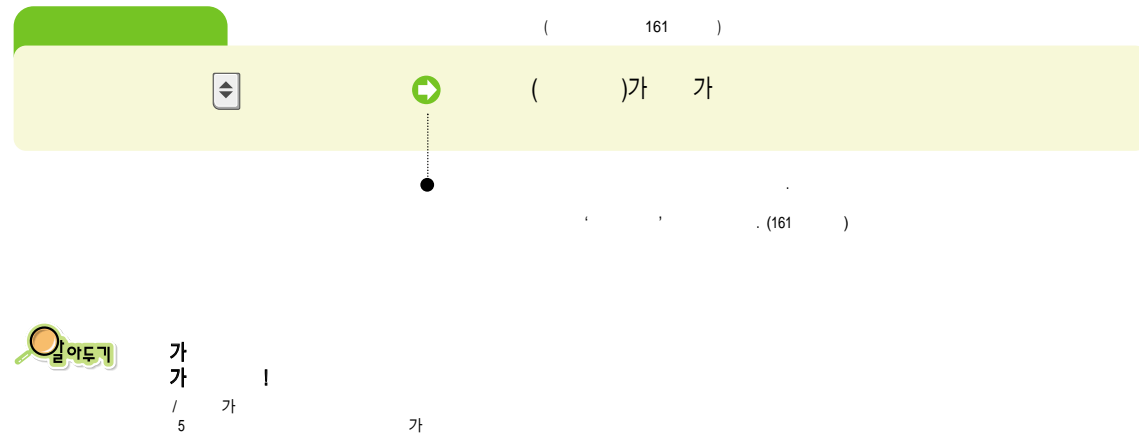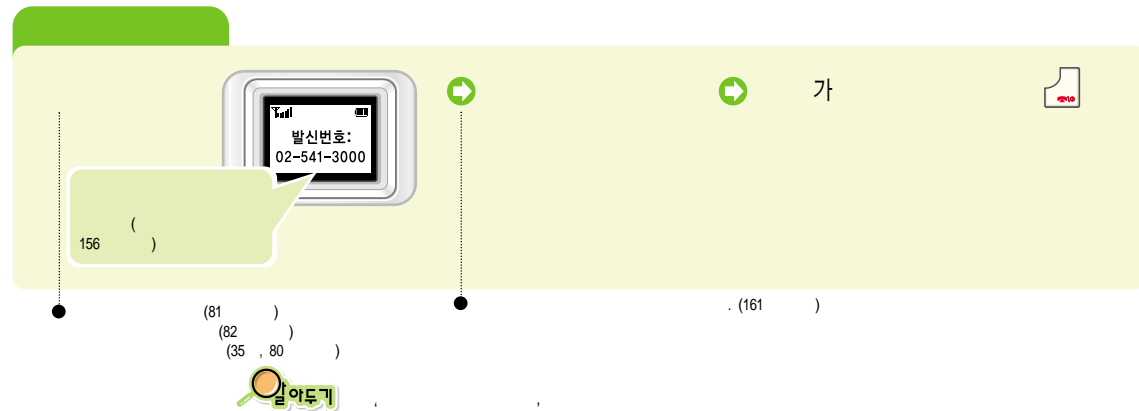


()

/

'7 / '

 가

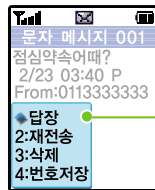

:

(105)



:



:



:

(64)

 
가

가



(

)

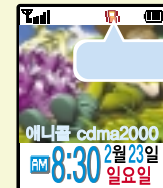

D-DAY

/



가	<div> <div>통화중예</div> <div>↕ ()</div> </div>
가	<div> <div>통화중예</div> <div> <div>☰</div> <div>→</div> <div>☰</div> <div>가</div> </div> </div>
	<div> <div>통화중예</div> <div>→</div> <div>☰</div> <div>→</div> <div>70</div> </div>



가	<div> <div>통화중예</div> <div>☰</div> <div>→</div> <div>3 def</div> <div>☰</div> <div>→</div> <div>3 def</div> <div>가</div> </div>
가	<div> <div>통화중예</div> <div>☰</div> <div>→</div> <div>4 gh</div> <div>☰</div> <div>→</div> <div>4 gh</div> <div>가</div> </div>
	<div> <div>통화중예</div> <div>→</div> <div>☰</div> <div>→</div> <div>5 gh</div> </div>
DTMF	<div> <div>통화중예</div> <div>→</div> <div>☰</div> <div>→</div> <div>☰</div> <div>→</div> <div>☰</div> </div>

MEMO



이 휴대폰의 문자 입력 방법을 설명합니다.
사용전에 반드시 익혀 두세요.

  40
40
41
43
44

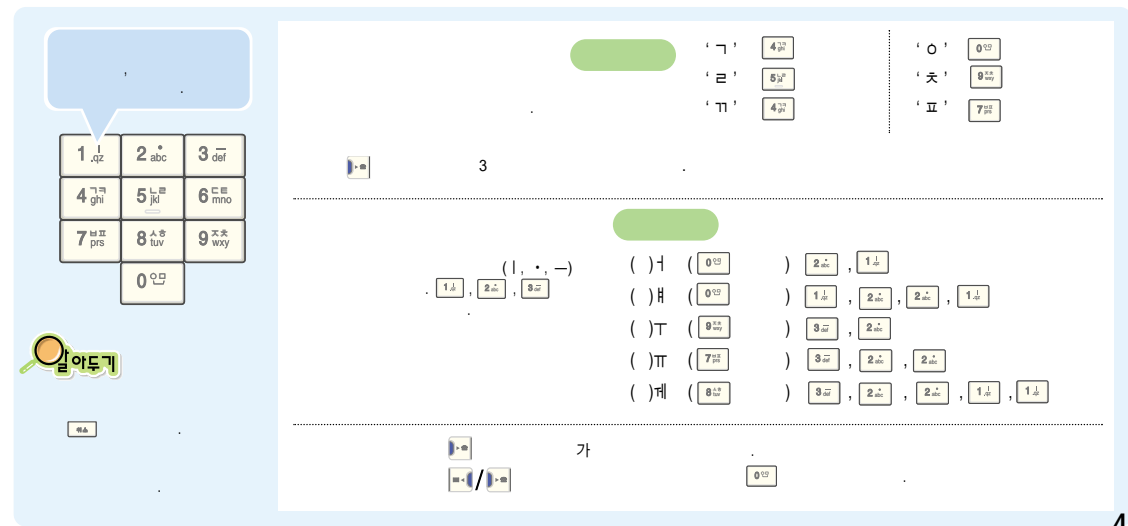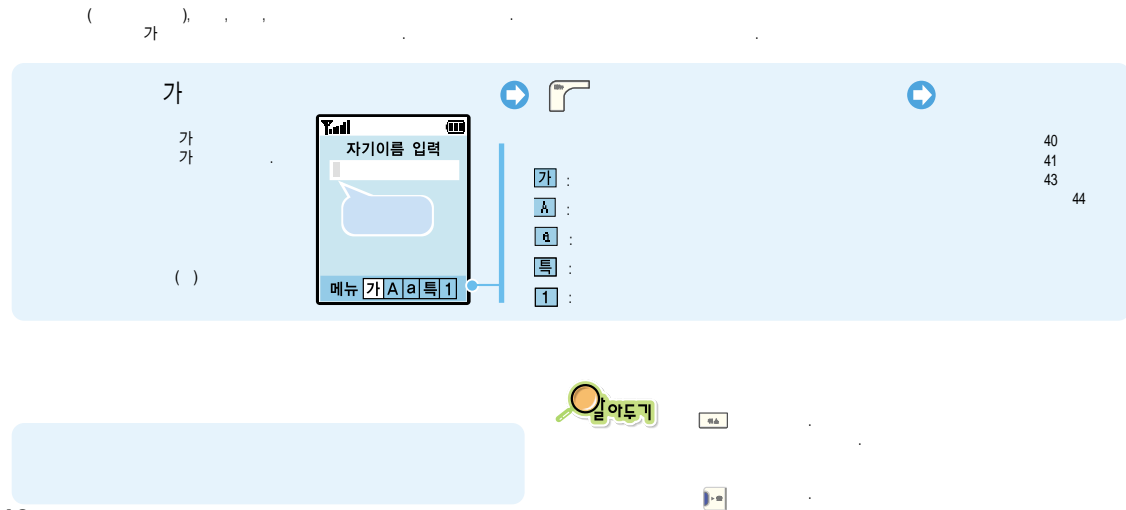





1. qz	2. abc	3. def
4. ghi	5. jkl	6. mno
7. prs	8. tuv	9. wxy
0. 인		


주소

E-mail




	* / %	# @
	/	@
	#	#

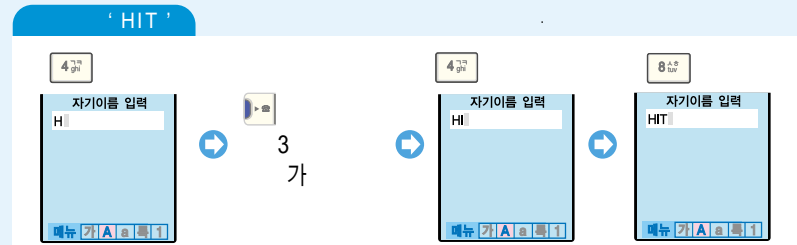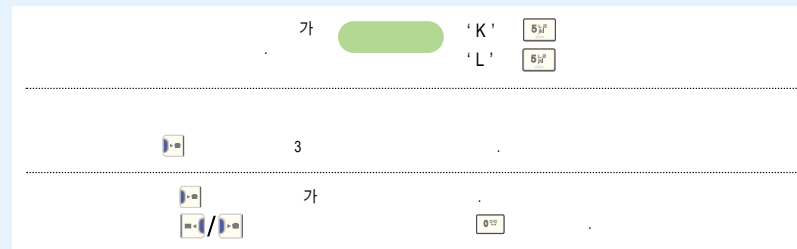  

[illegible]

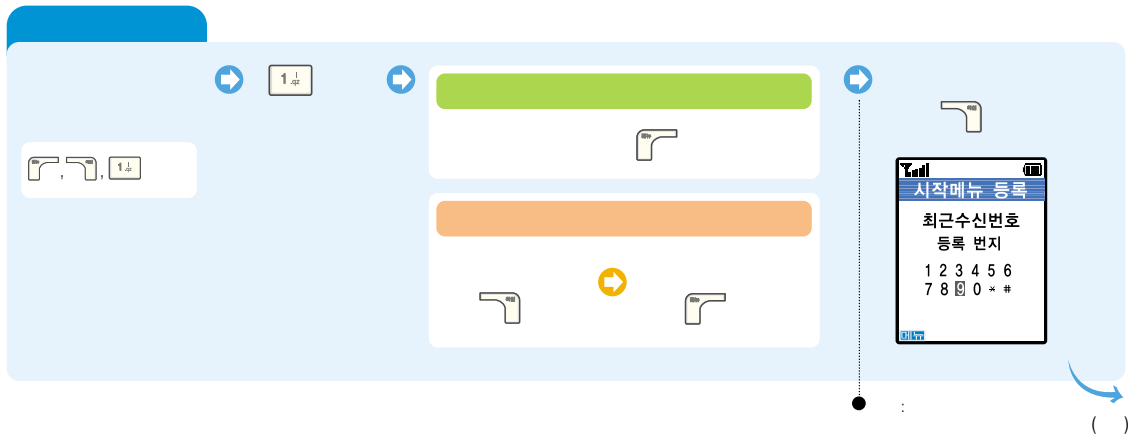 

()

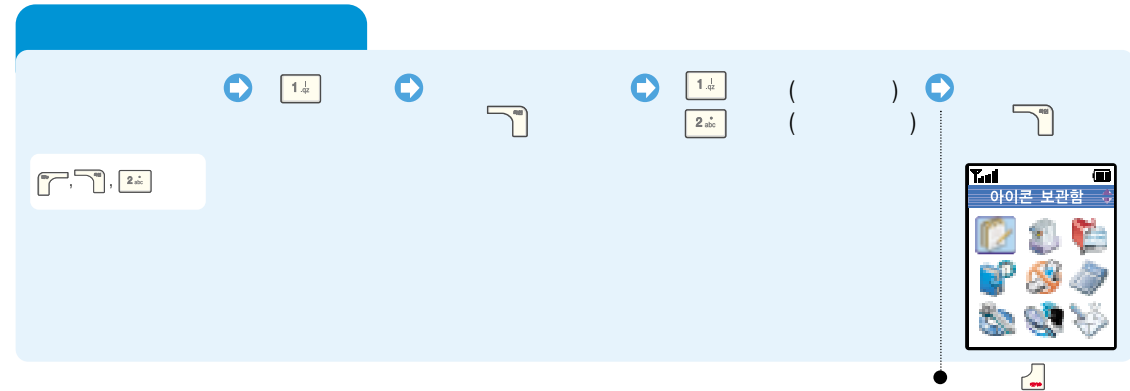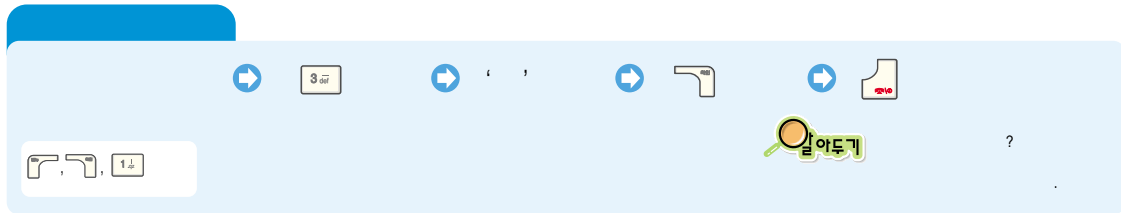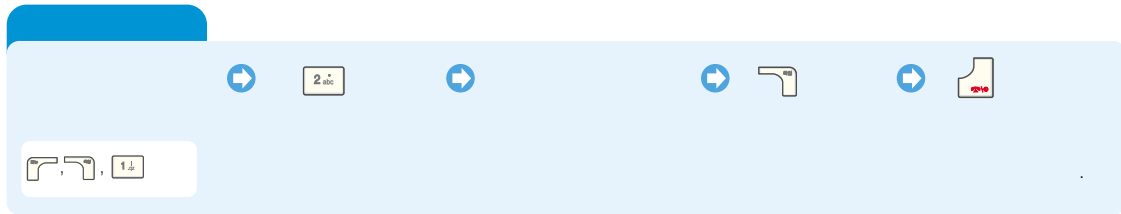   


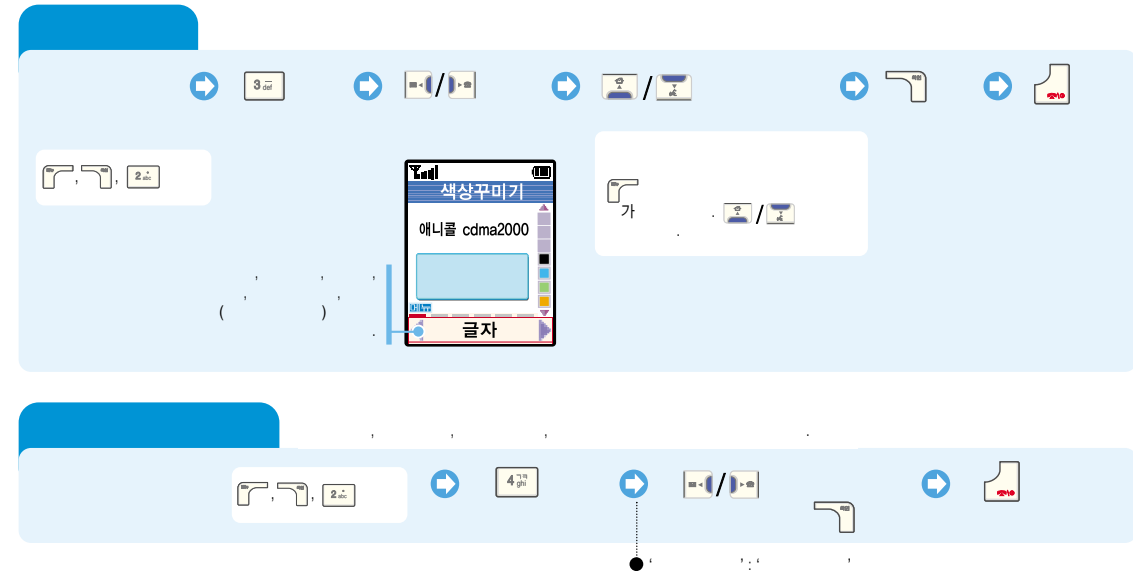 


Diagram illustrating a simple neural network structure with three layers:

- Input Layer:** Two nodes labeled "abc" and "2 abc".
- Hidden Layer:** Two nodes labeled "5 ju" and "1 .qz".
- Output Layer:** One node labeled "2 abc".

 Arrows indicate the flow of information from the input layer to the hidden layer, and from the hidden layer to the output layer. A green box on the right contains the text "PC 2000".

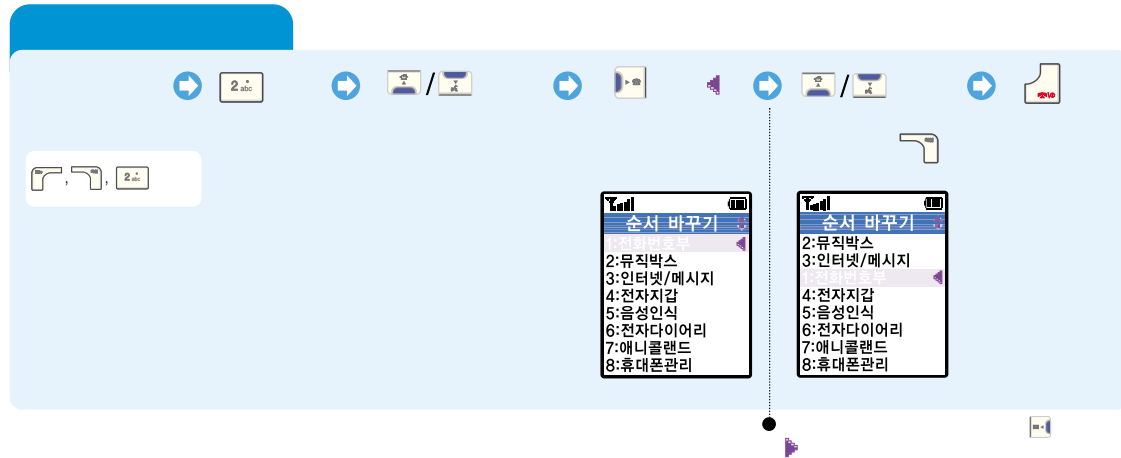

 **알아두기**

53

()



. (: ' ')



/Language



 
' KOREAN '

' ENGLISH '




NATE

가

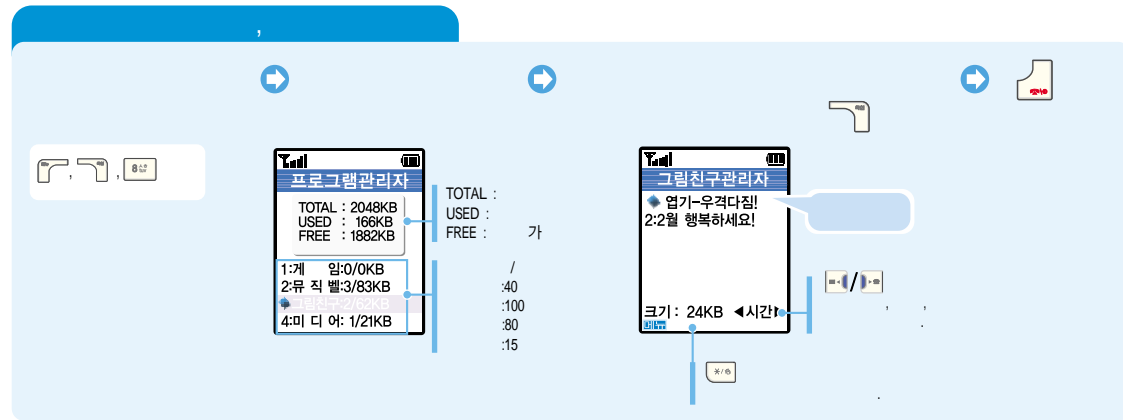

가

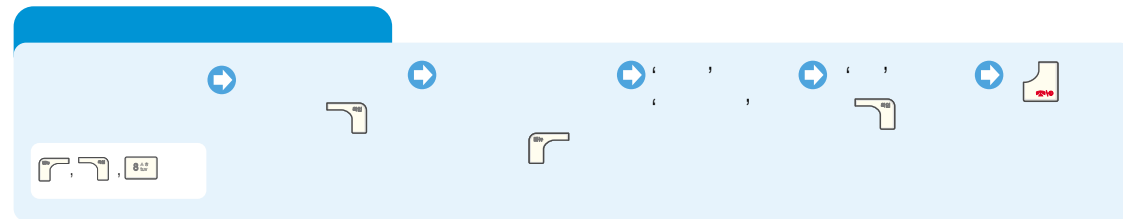 

xxKB가

가

MEMO

 


가

5

/ /


62
65
70
71
73
75
77
77

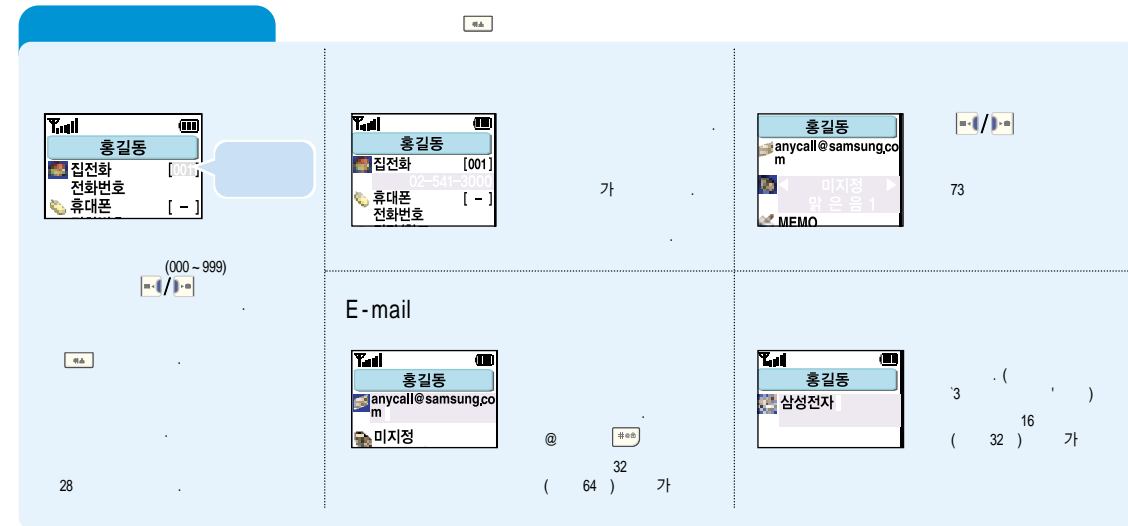

64



 5

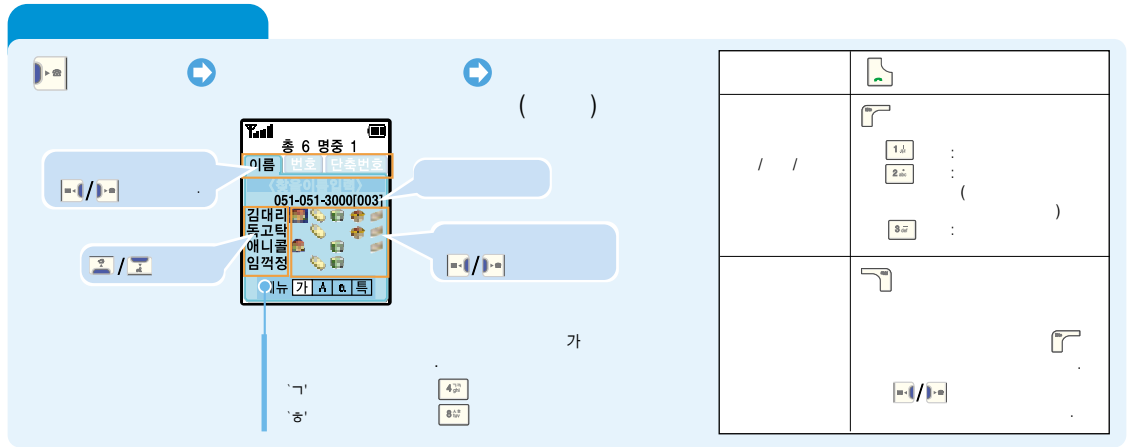

()

130~132



(65)



(000~999)



()



/	 1 ↓ : 2 ↓ :
	 = / =



66

(65)



('3 ')



(65)

가



: ' × (: ×123 × 123)
' × (: 011 × 011)
' × (: ×3000 3000)

67

()



(65)



(65)

114



114



114
(86)

가



114 ?
NATE

/ /

100
가

/	<div>1. : </div> <div>2. : </div> <div>3. : / / </div>
	<div></div> <div></div>

최근발신번호[1/100]

김과장 031-000-0001

등록된 이름없음 011-300-3000

등록된 이름없음 011-011-3000

삼성이 011-001-0000

2. ()

3. ()

4. ()



가 , ' 가 (200)

스페셜 관리번호 등록

이름 번호 단축번호

《활동이동인행》

051-051-3000[0031]

 
 
김대리
독고트
애니콜
임격장

메뉴 가 사 & 특


6. 2.

가 / 나


()

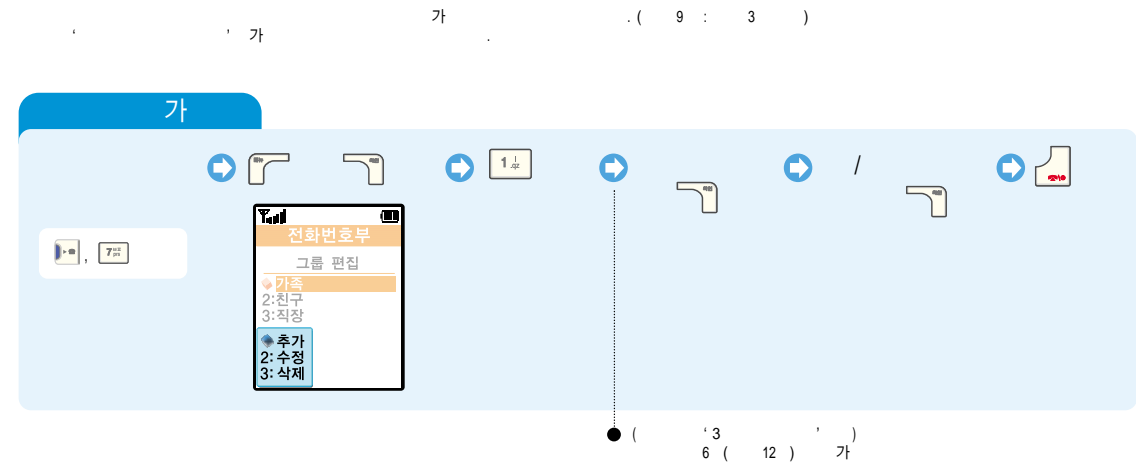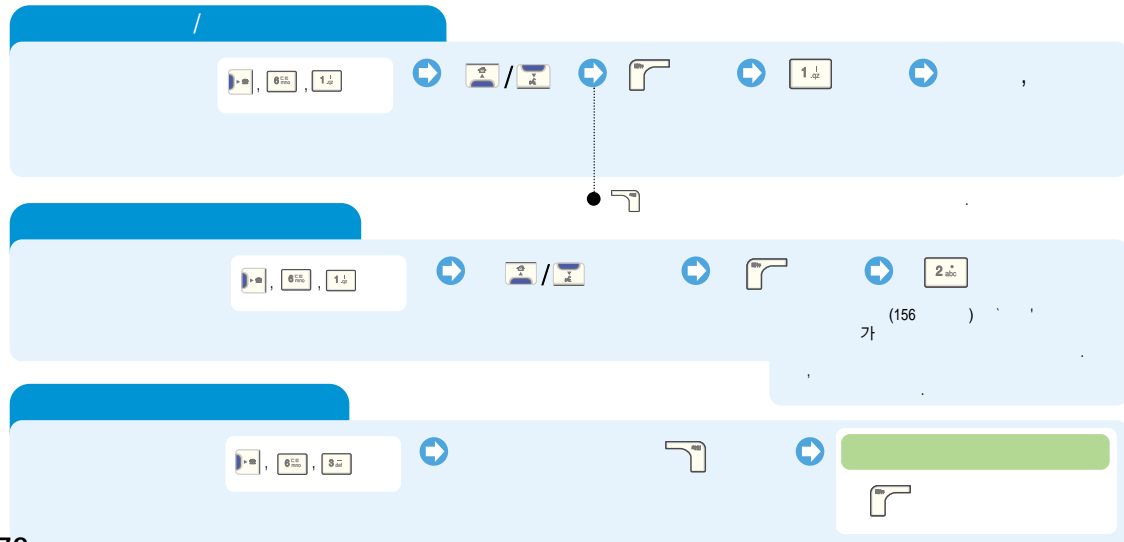

()

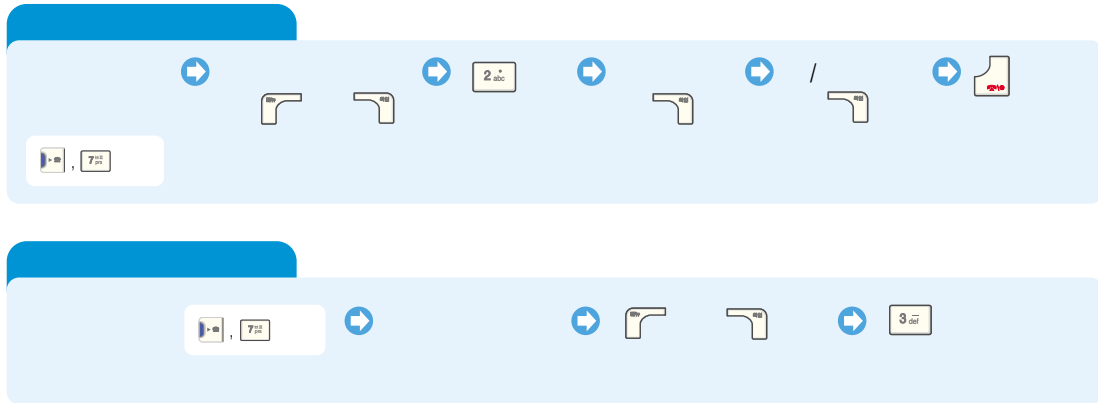 

가 ' , / / ..

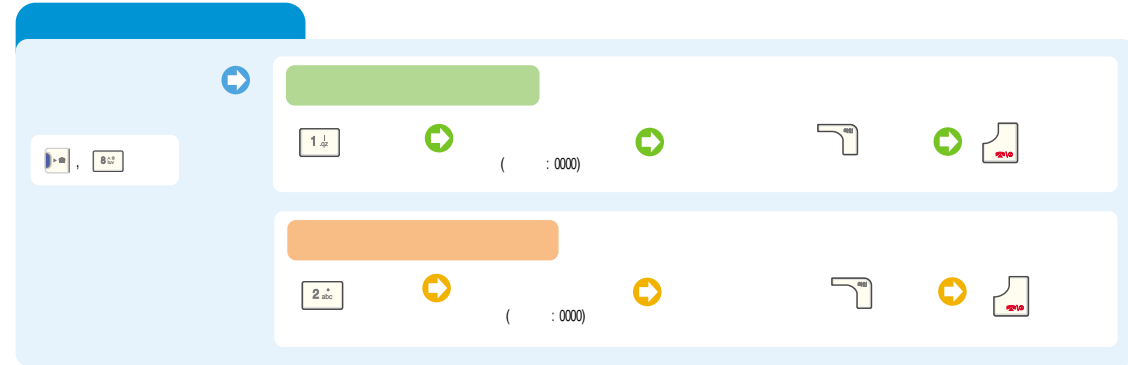 

가

()

3 del (: 0000) ' , 2010

> , 8 2010



가

가

(, , 가 . (가)

가

5월 10일

> , 8 2010 (: 0000) ' , 2010

> , 2010

MEMO

PC 2000


PC 2000




/

,



 
80
81
82
82
83
84

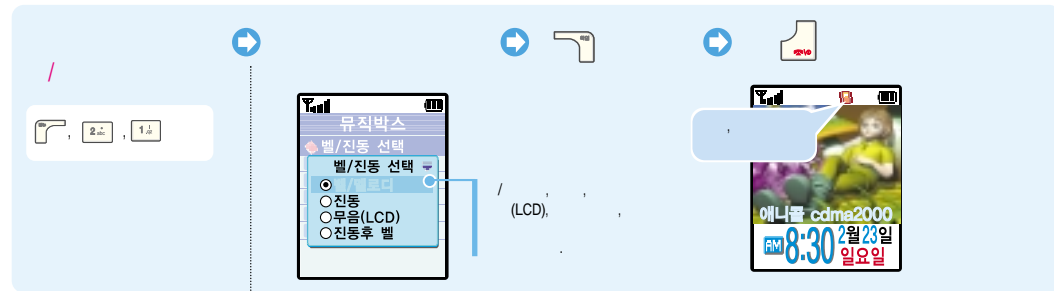


가
 (LCD):
 : 3
 : 가 10

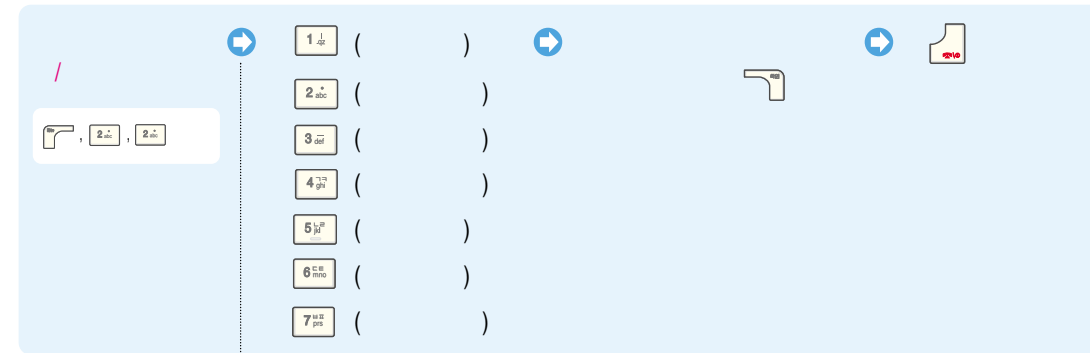 

   : NATE
 : 700
 : PC 2000
 (166)
 (166)
 (167)

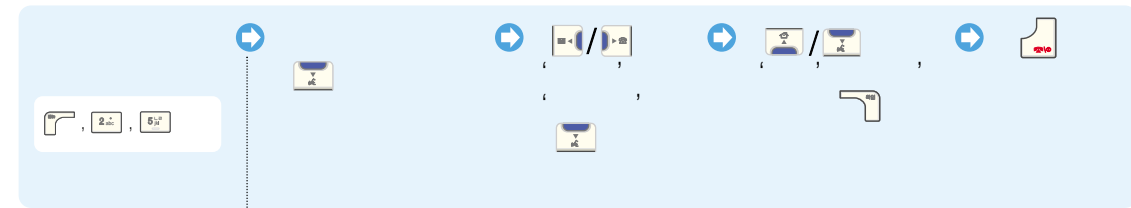

● 00~23

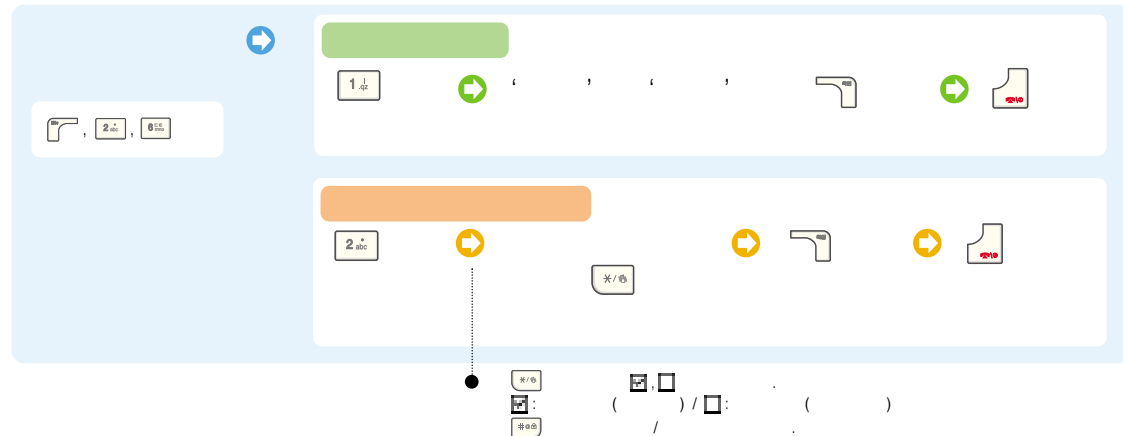 

NATE

NATE	86
Playon	88
E-mail	91
	92
	93
	96
NATE Air	100
	105
	111
	112
E-mail	113
	119
	120

NATE

(NATE , .)

NATE

/

NATE
NATE

NATE

NATE , 1.1

NATE-Basic
My홈 매일 검색
이벤트 내인생+1
1.채팅/미팅/방송
2.증권/복권/금융
3.게임Zone
4.뮤직/그림/포토
5.스포츠운세만화
상위 연결

	취소
NATE	취소
	()

NATE



가



1.즐거찾기
2.즐거찾기추가
3.새로고치기
4.새 URL 열기
5.Phone 기능
확인

가

가

URL
URL
Phone
NATE

Playon

NATE

Playon

Playon
Playon

Playon

Playon

/
NATE
Playon

 


Playon



Playon

/
NATE
Playon



/
NATE
Playon



NATE
2

가

가

NATE

가

가

Playon ()

Playon

/

NATE

Playon

NATE

3

→

✖/↺

→

1

qz

()

→

↵

→

2

abc

()

3

def

()

4

ghi

()

5

jkl

()

	Playon	☰
	Playon	(, ,)
	(/ / /)	
	(/)	

NATE Wavelet ()

/

NATE

NATE

4

→

→

()

↵

:

↵

:

↵

:

↵

:

↵

→

↵

E-mail

E-mail

NATE

 
NATE

E-mail



가 , SPAM

가

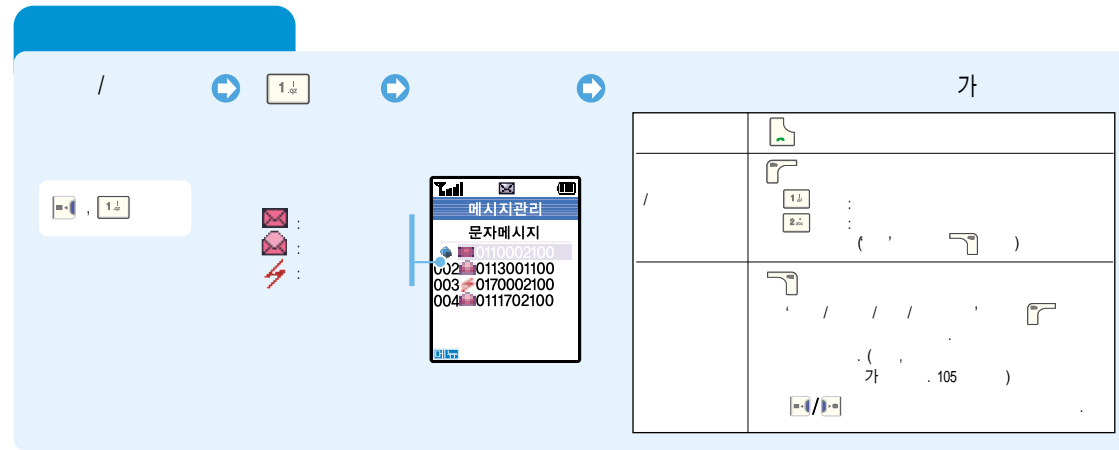

()

/

2 abc

음성메시지: 1개

2/23 10:30 A

From:0113003000

1:듣기 *89

2:삭제

가

(,)

1

2 abc

알아두기



가

가

' 1' . (, (LCD),)

/

3 def

1 abc

2 abc

()

()

가

(LCD), 1, 2, 3, 4, 5,

2

가

4 gh

가

가

10 가

알아두기 (SPAM) ?

/

5 노리 1 노리

32 가

가

1 노리 : 가
2 노리 :
3 노리 :

10 가

알아두기 가

/

 
 
5 노리 2 abc

16 (32) 가

가

1 노리 : 가
2 노리 :
3 노리 :

()

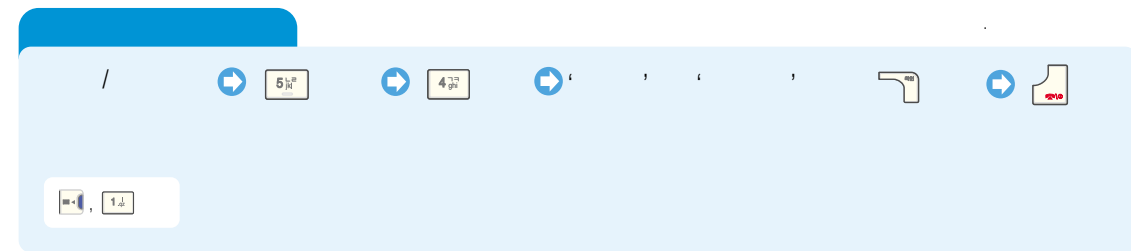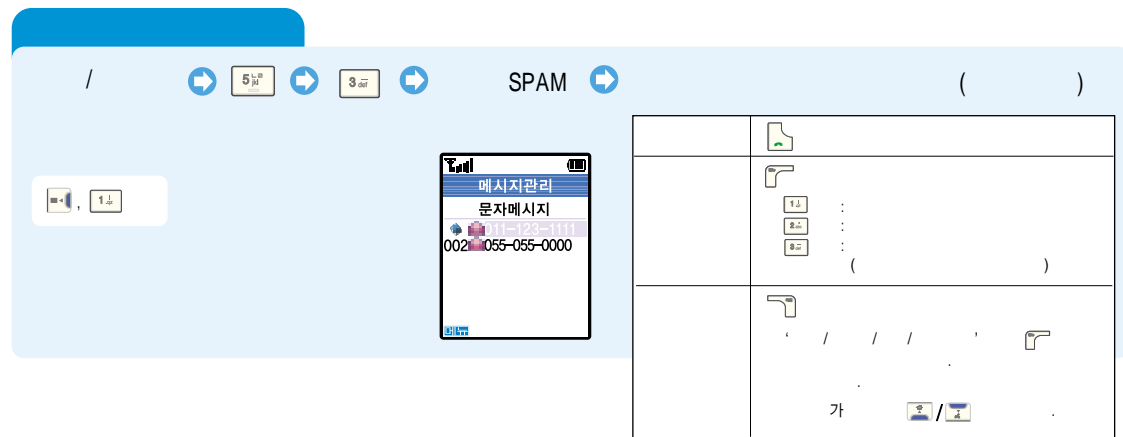

NATE Air

NATE Air ? NATE

가

(

.)

가

NATE Air



가



NATE Air

가

 
가

NATE Air

가

가


NATE Air

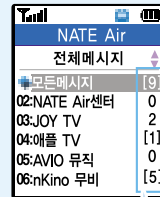

[1]:

 3:




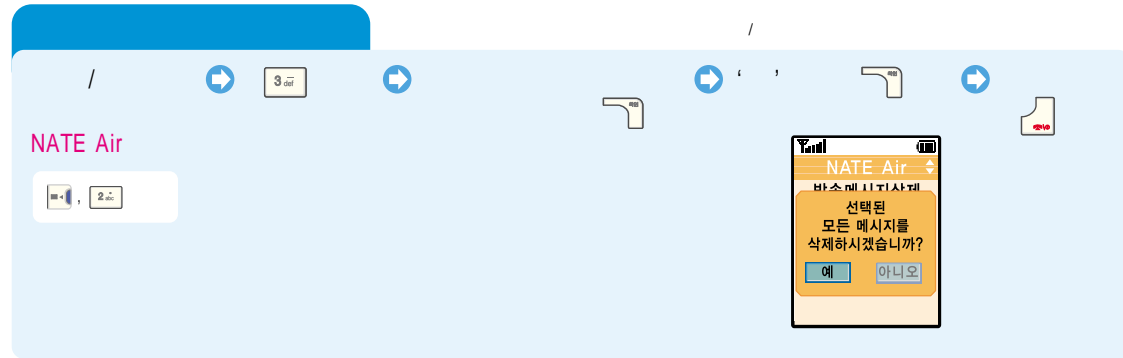



?

가

 가

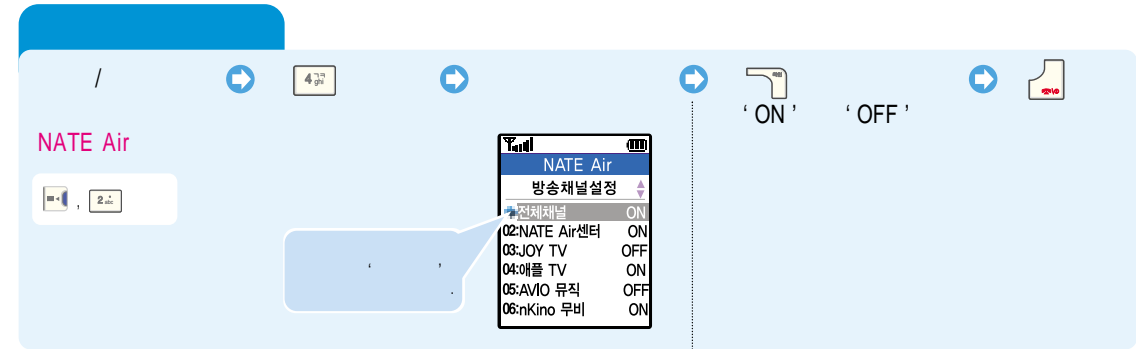

ON :
OFF :

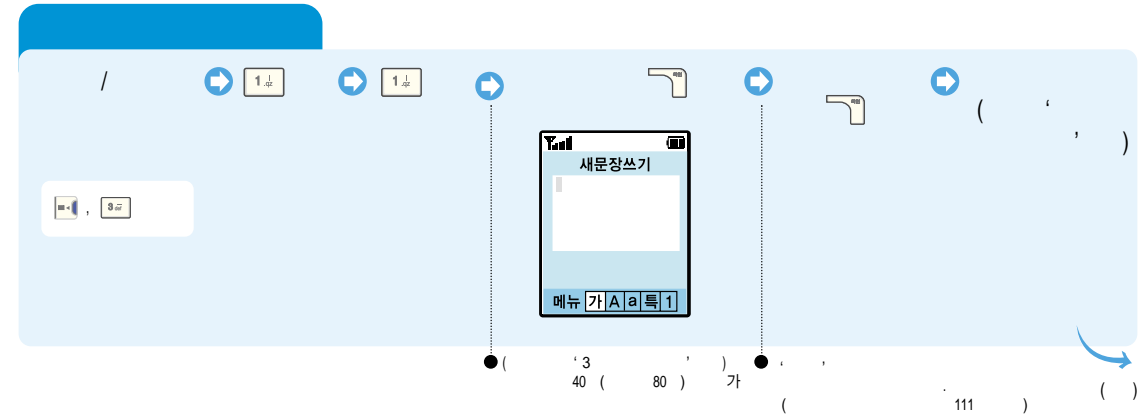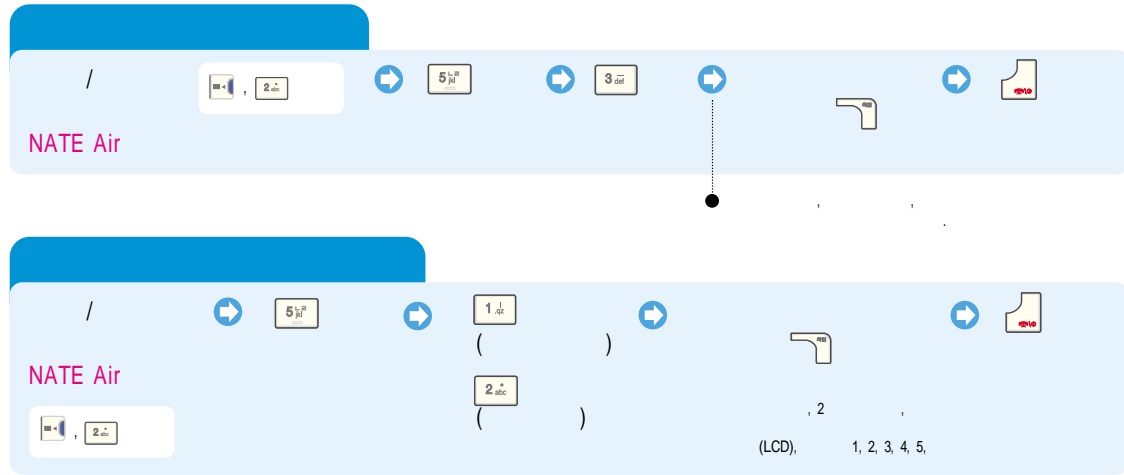  



가

110

. (110)

110

/



가

(105)



 
/




7

/


()

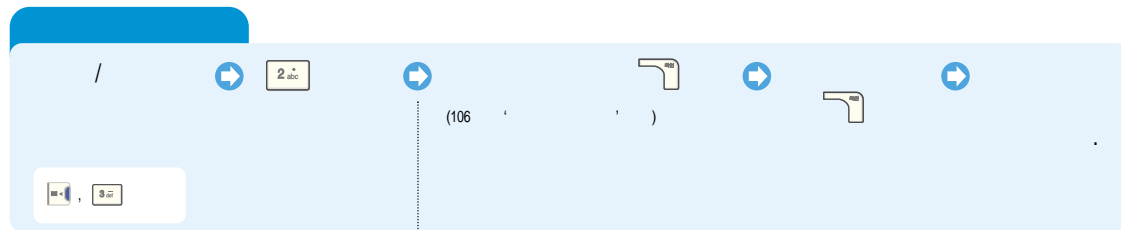

108

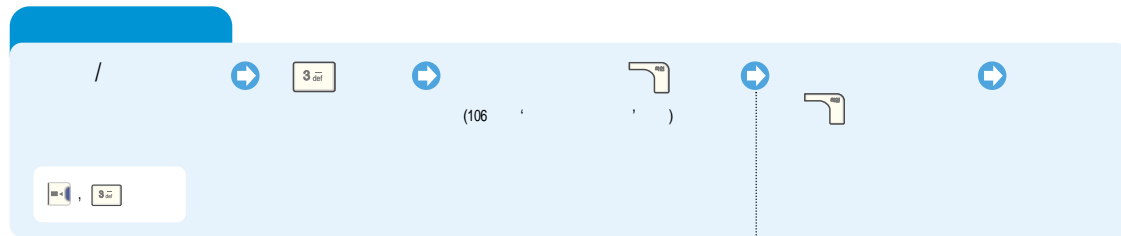 

108

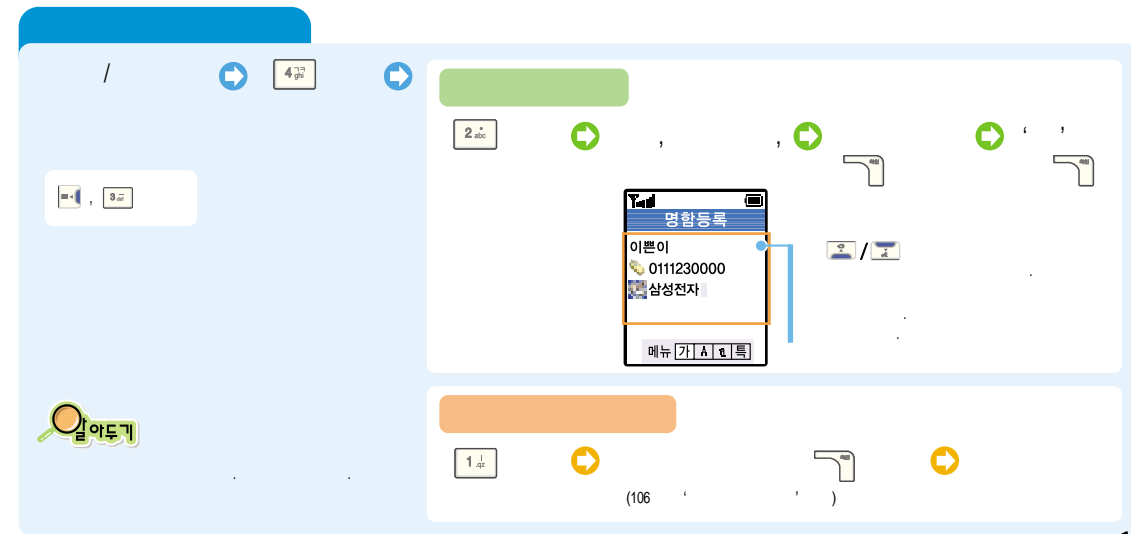 

109

7

()

(20) :
(5) :

/

5 $\frac{1}{2}$ $\frac{1}{2}$ 1 $\frac{1}{2}$ () $\frac{1}{2}$ ()
2 $\frac{1}{2}$ ()

3 $\frac{1}{2}$

	$\frac{1}{2}$
/	$\frac{1}{2}$: 2 $\frac{1}{2}$: 3 $\frac{1}{2}$:




가 가

. (80)

/

4 $\frac{1}{2}$ $\frac{1}{2}$ ()

	$\frac{1}{2}$, $\frac{1}{2}$
/	$\frac{1}{2}$: 2 $\frac{1}{2}$: 3 $\frac{1}{2}$: (105)

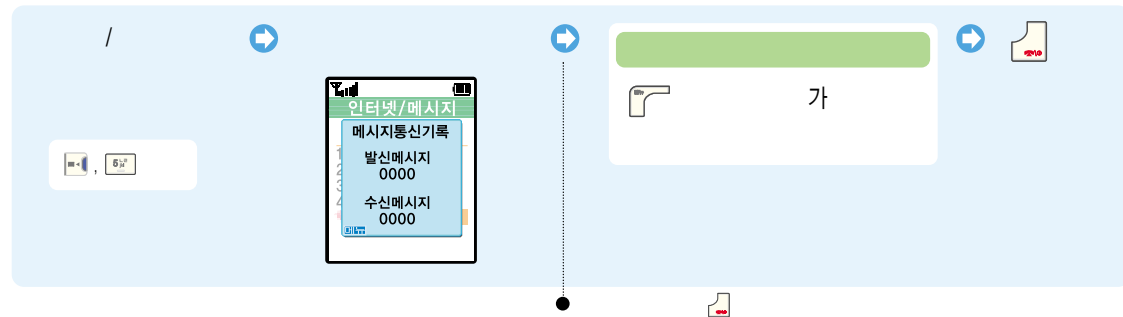 


E-mail



NATE E-mail

가


NATE

   E-mail

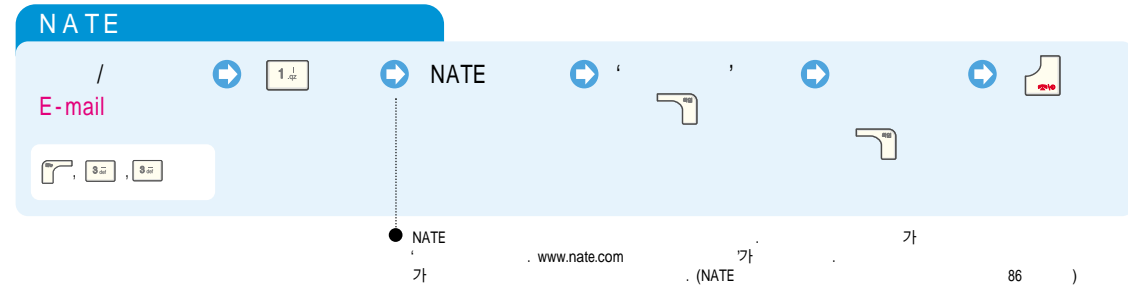

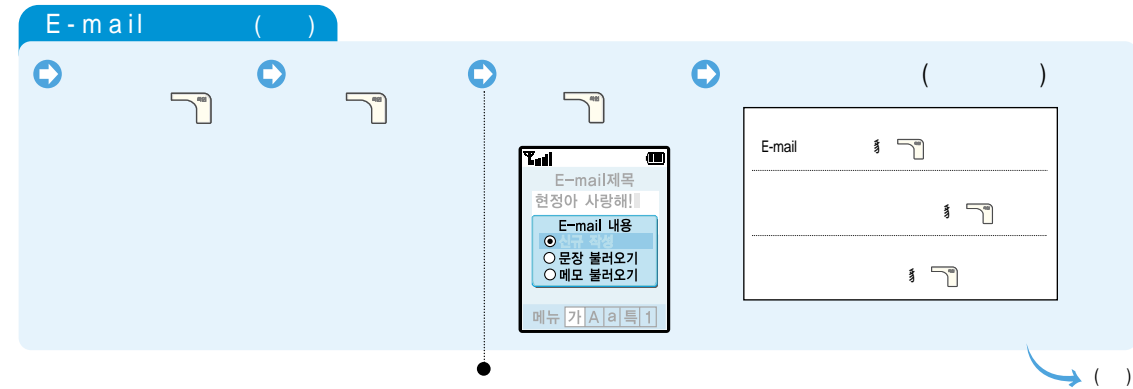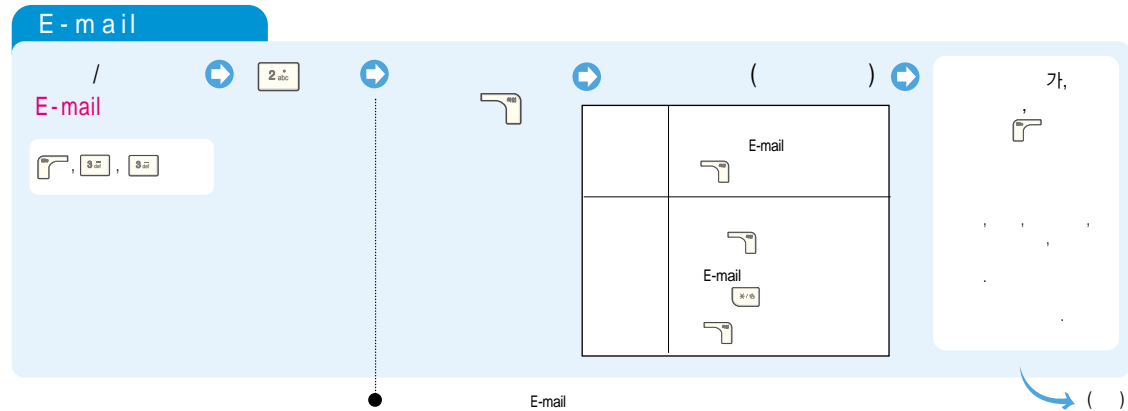

E-mail ()

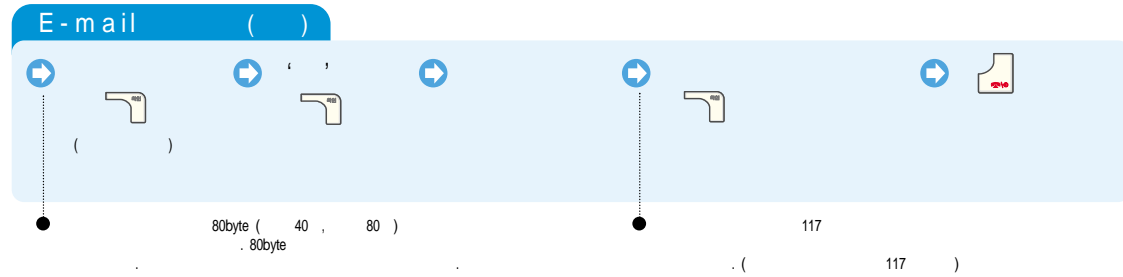 


E-mail guest@nate.com
 . NATE . (118)

E-mail

. (.)

116

 : E-mail
: ()

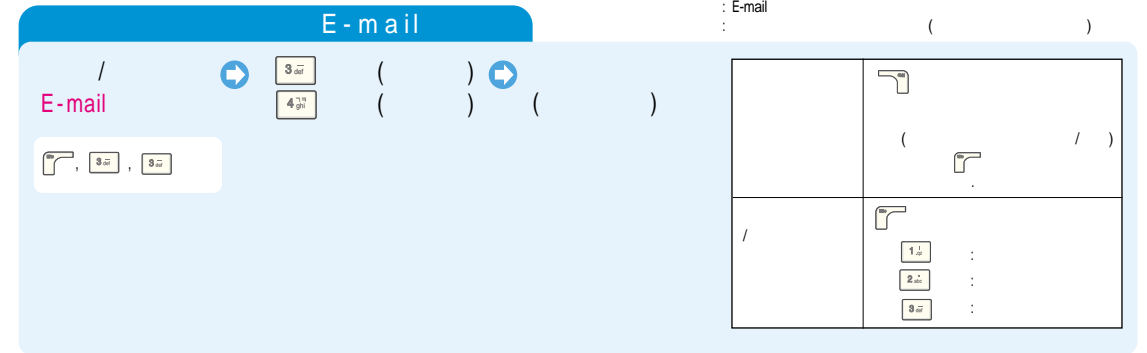

117

E-mail ()

E - mail

/
→

5 jk

→

1 .qz

2 abc

→
(: 0000)
→

[Phone Icon]

→

[Phone Icon]

→

[Attachment Icon]

[Phone Icon]

3 def

3 def

	nate.com
	가 E-mail
	guest@nate.com
	가



162

가
()

(www.anycall.com)

/
→

1 .qz

2 abc

3 def

→
()
→

[Phone Icon]

→

[Attachment Icon]

[Phone Icon]


3 def

4 gh

	/
	, ,
	, 19.2 kbps, 115.2 kbps, 230.4 kbps

NATE

 NATE

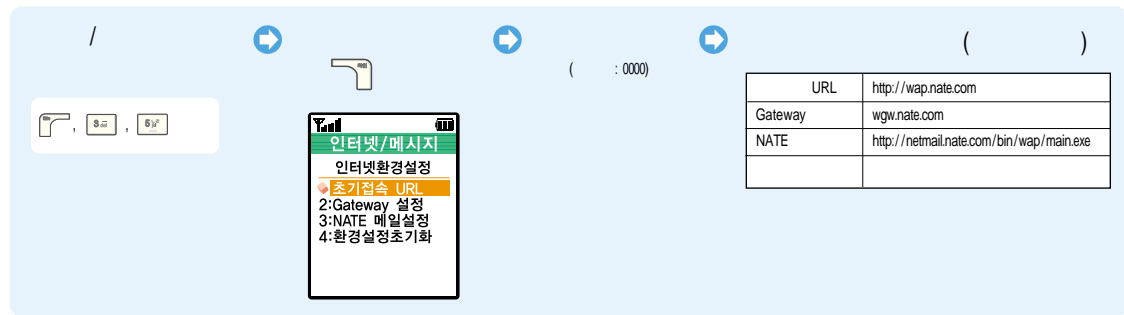

가

8

NATE

()

122
123
125
126
127



 
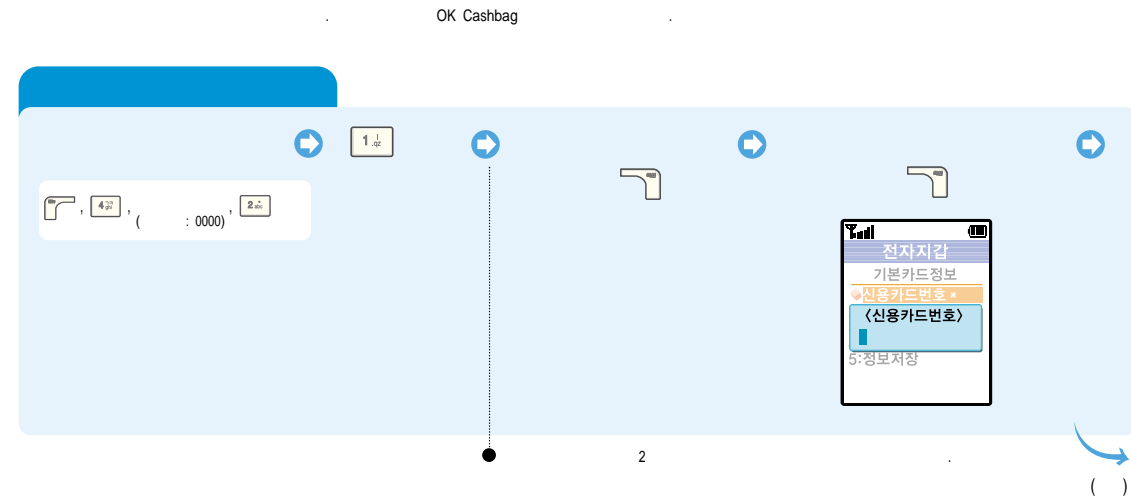 


Diagram of a simple assembly line with two stations. Station 1 has a worker icon, a blue arrow pointing right, and a box labeled '2 abc'. Station 2 has a worker icon, a blue arrow pointing right, and a box labeled '3 def'. A dotted line connects the two stations, ending in a black dot.

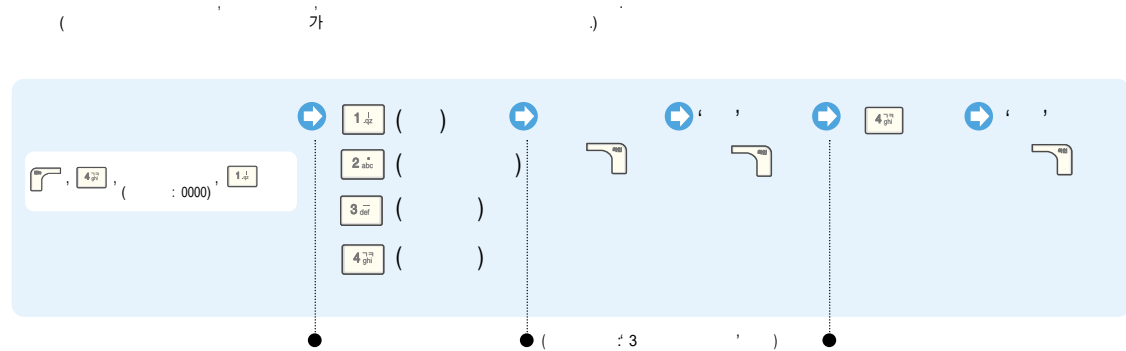 

• (' 0000 ')

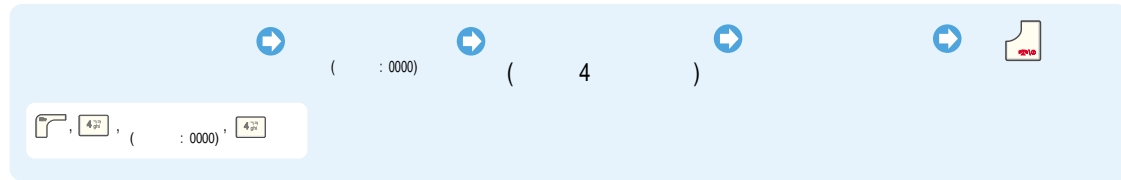 


9

NATE

NATE

가

 CA

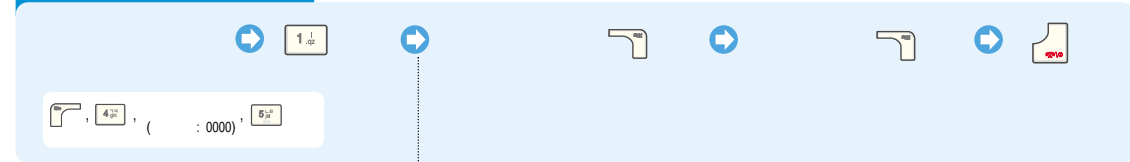

● 7

가



● 5

.....

.....

.....

.....

.....

.....

.....

.....

.....



.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

 
.....

.....

.....

.....

.....

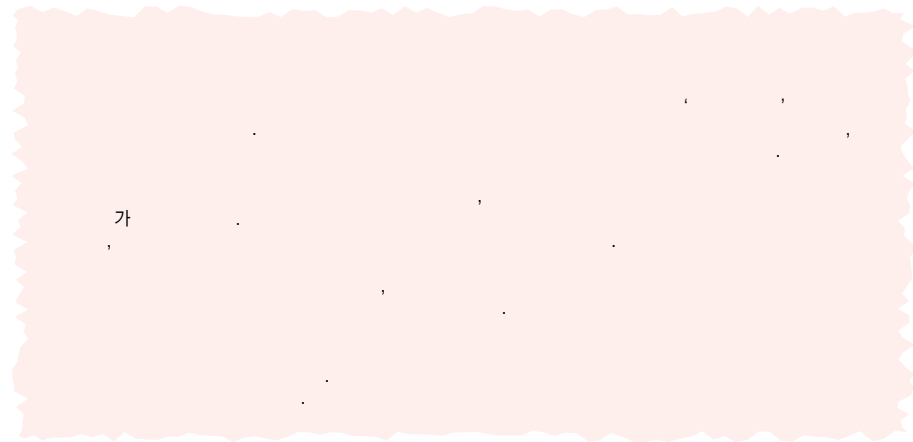

가




Handwriting practice section for the Korean character '가' (ga).

Stroke Order Guide:

- 1. Top-left corner (ㄱ)
- 2. Top-right corner (ㅇ)
- 3. Middle horizontal line (ㅡ)
- 4. Bottom horizontal line (ㅁ)
- 5. Bottom-right corner (ㄴ)

Tracing Practice:

(:)	' 3 '	3	' 1 ' 1
(:)			
(: 3)			
(:)			

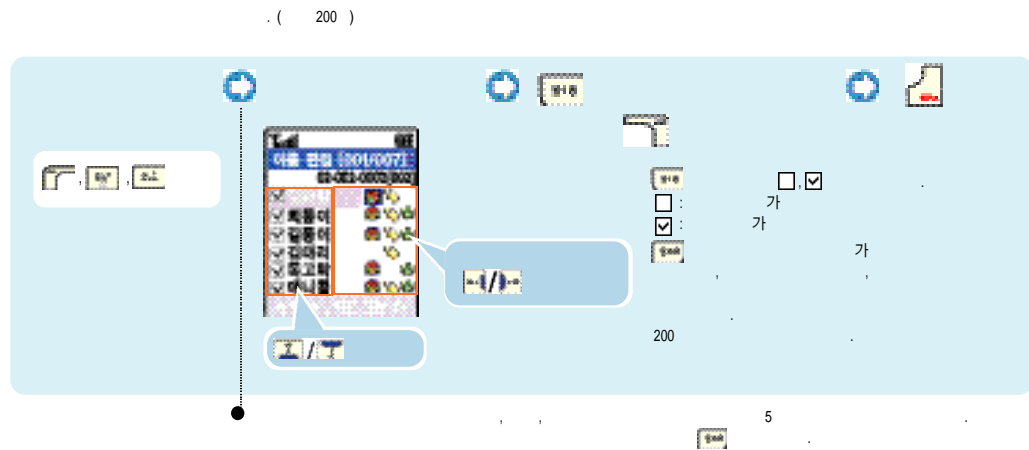 

10

D-DAY

134
135
136
140
142
143
144
146
147

3

 



가
가

 
2

3




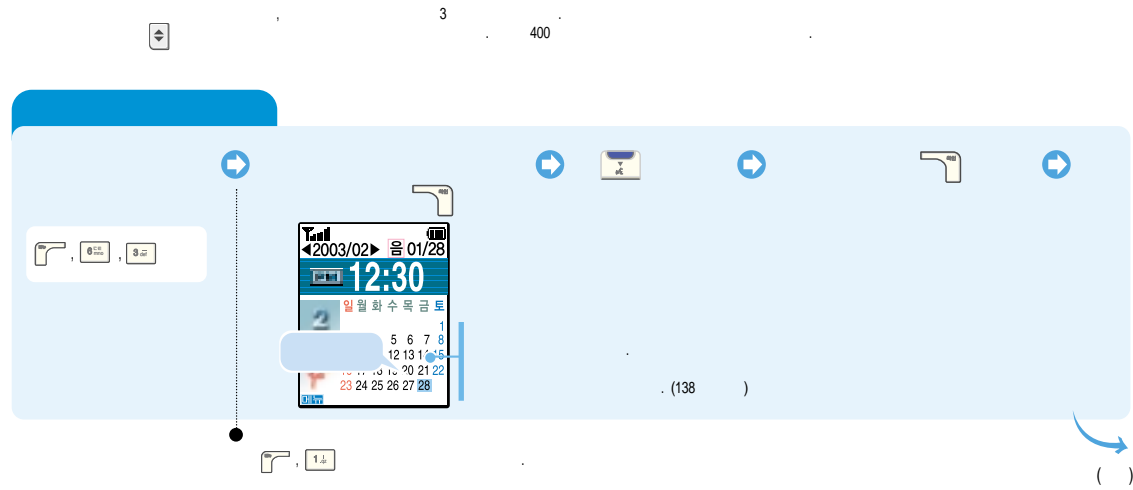




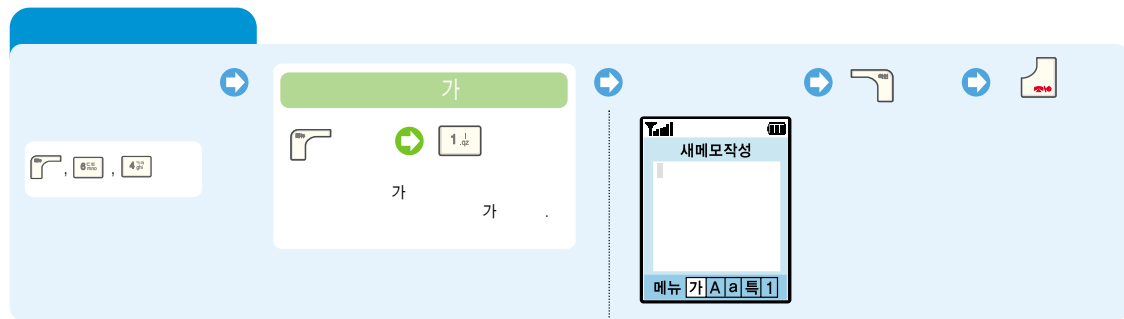


(' 3 ') 가
100 (200) 가

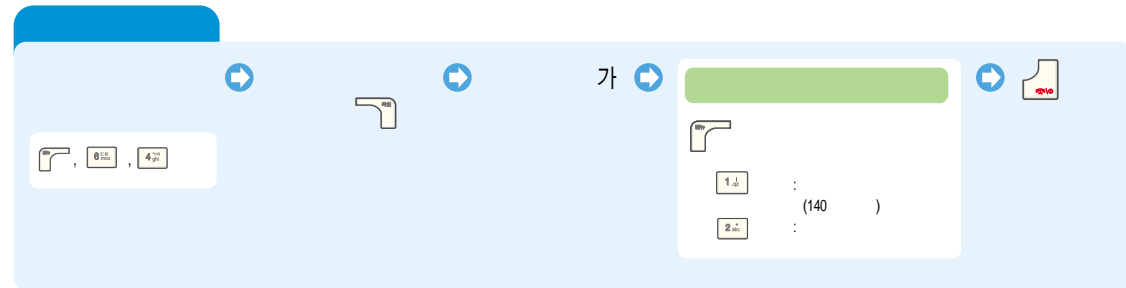 

(' 3 ') 가
(' 100 ') 가

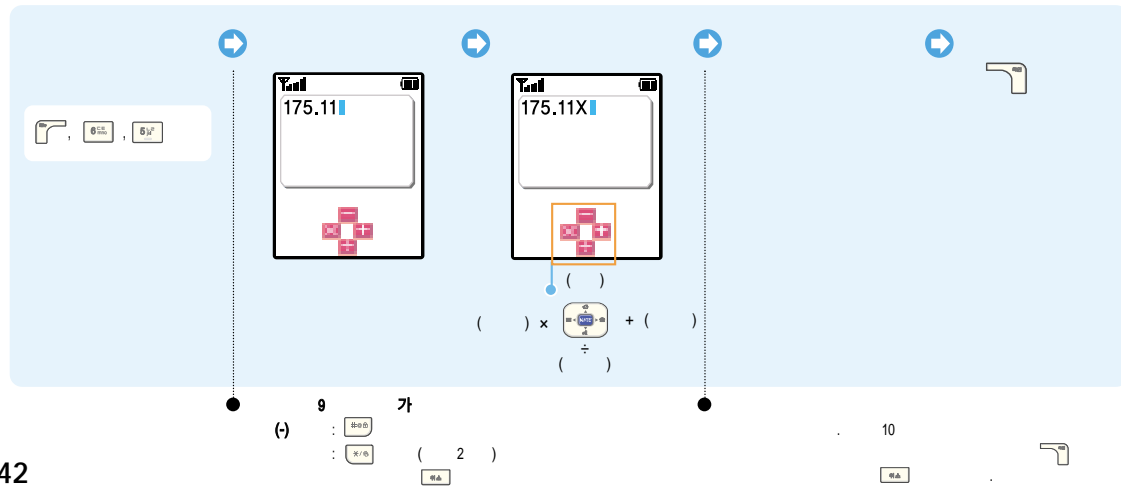 


가

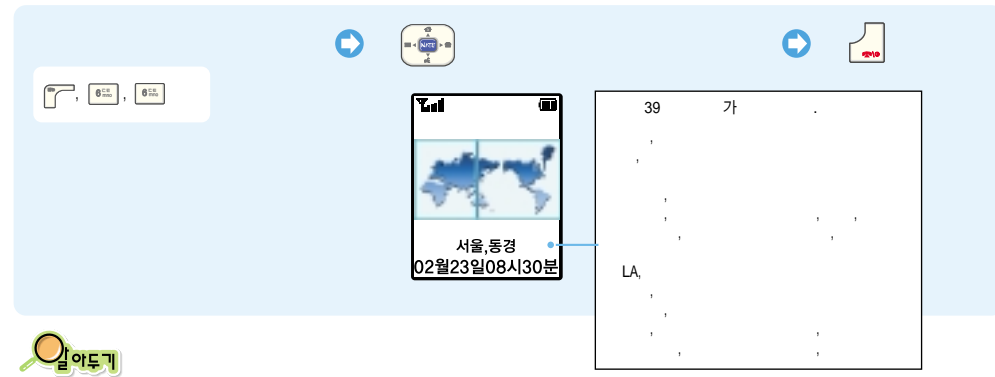 


D-DAY

 
D-DAY 10 D-DAY

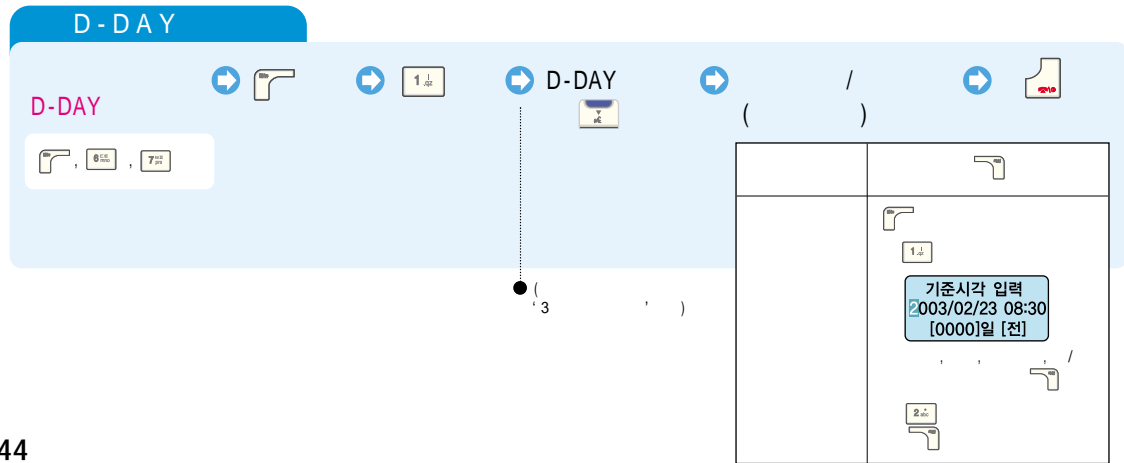


D - DAY

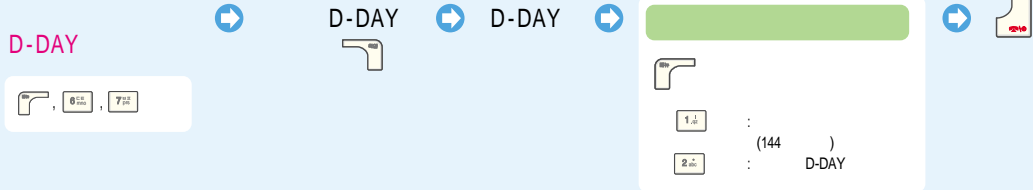 


D - DAY

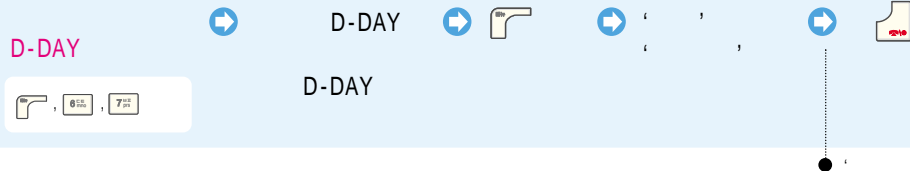 

가 가 , , , ,

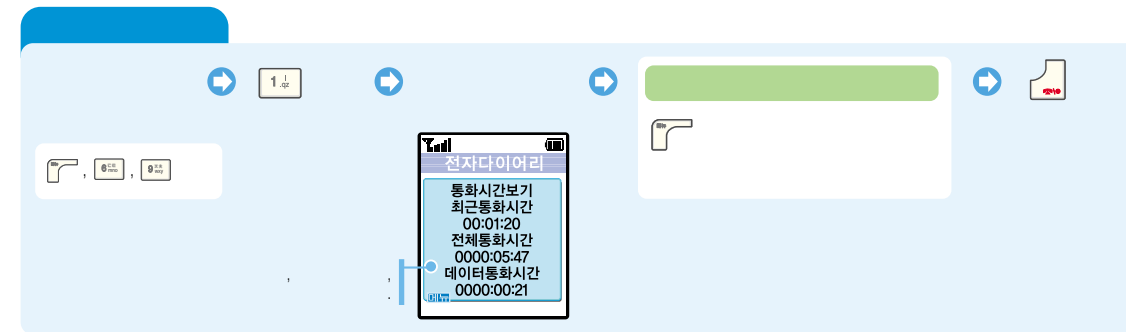 

(NOTE)

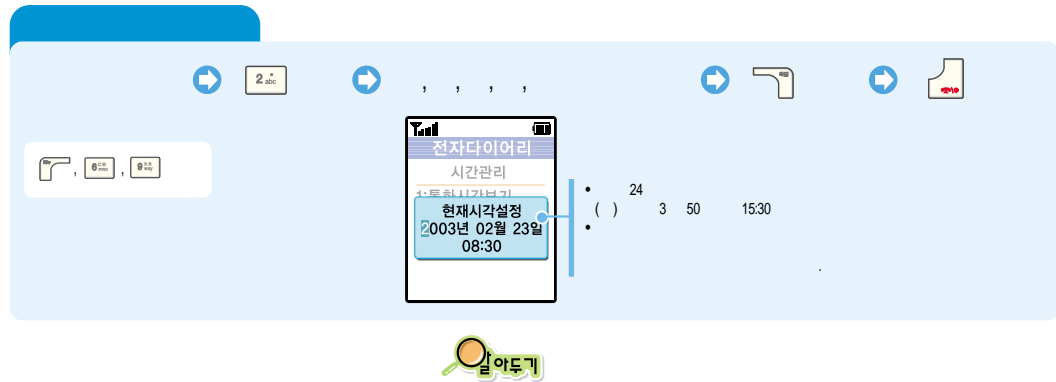 

Push Push

150
151

Push Push

Push Push



가 (1) 가

가

(www.anycall.com)



.....

.....

.....

.....

.....

.....

.....

.....

.....



.....

.....

.....

.....



.....




.....


.....

.....

.....




 ,  , 







  1 | .qz ()   (: 0000)  ‘ / ’  




 2 | abc ()
 3 | def ()
 4 | gh ()







	가
(:)	
(:)	가 ‘ 가 가
(:)	
(:)	가
(:)	(, ,)



 ,  , 

  1 | .qz    

 ,  , 

  2 | abc    

5

8

()

/

→ 3 def → 1 .qz () → ↵ → 2 * abc () ↵ ↵

↵ , 8 12 12 , 4 12 12

. (: 30)

→ 4 12 12 → ↵ → ↵ ↵

↵ , 8 12 12 , 4 12 12


→ 5 ju → ‘ ‘ ‘ ‘ → ↵ ↵ → ↵ ↵

가 10

↵ , 8 12 12 , 4 12 12

가



● SKTelecom	
OTA	*  (A)/(B)
A-BAND	* , , , , ,
B-BAND	* , , (A) ,

* 가


가




()	가
	가 가 가



	가
	가

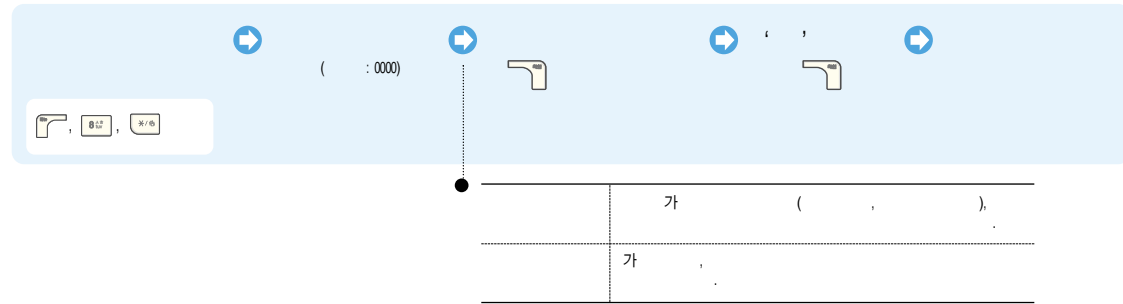 


(. 119, 112)

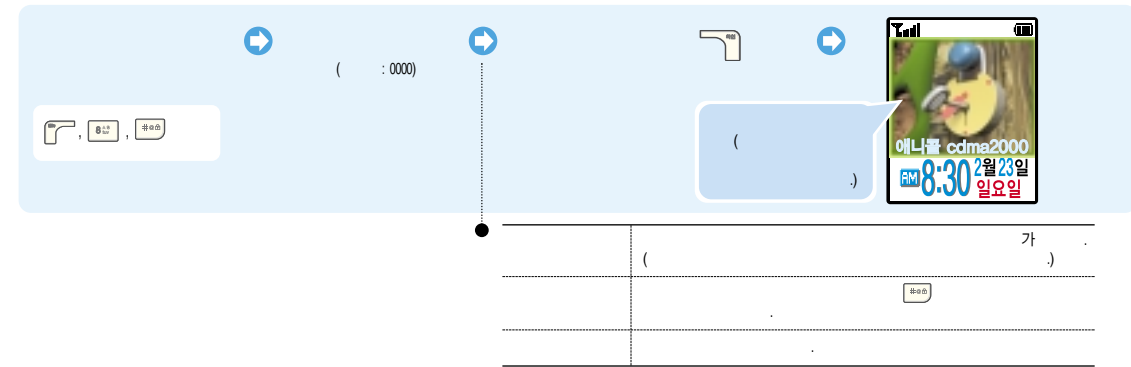 



13

NATE Drive (entrac)	165
	166
700	166
PC 2000	167
	168
?	170
()	173
	179
	180
	181
	183
for Foreigner	185

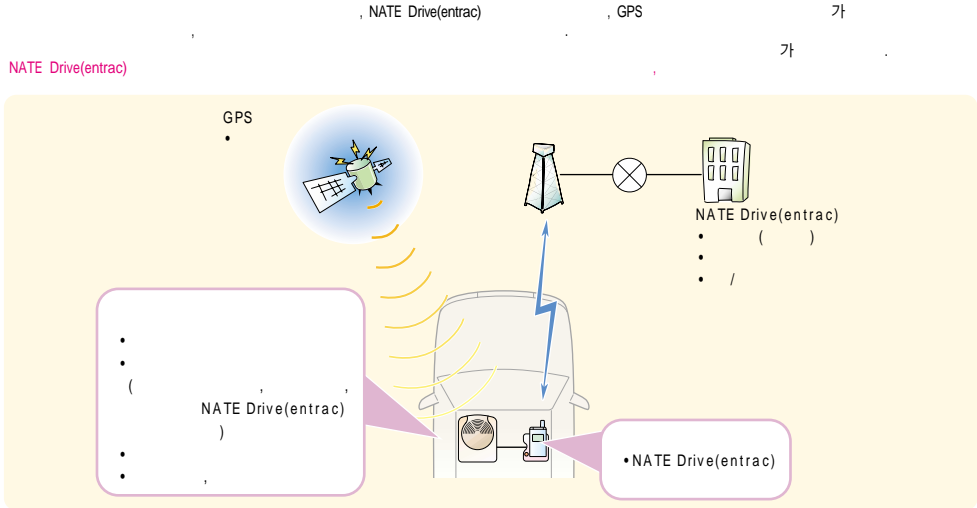 

NATE

.

(

)



NATE



'

/

/

'



가



700

700

()

()



가



(060-700-XXXX)



PC 2000

PC

PC

2000

(www.anycall.com)

PC

 
가



< :

가

>

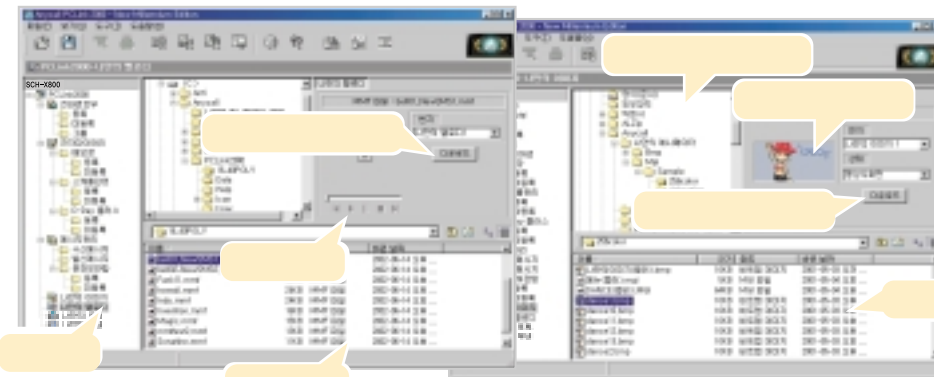

< :

가

>

(720 mAh)	3	110	55 ~ 190

(/cdma2000)

IS-95A/B

CDMA2000

가
, , ,
.
()
. (? 169)
가
가
가 ()
가 .

[illegible]

알아두기

2

2.5


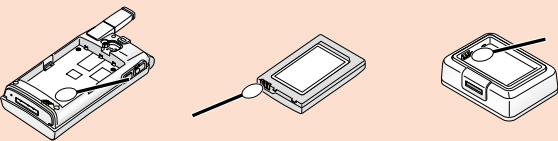 
가
5

?


!	가 . (18 ~ 19)
,	!
' X ' 가	2
	' X ' .
!	() . (158)
!	

가 .	. (172)
.	가
	가 가
() !	CDMA2000 IS-95A/B
() ?	
!	

가 ()

가	(36)
가	/ / (LCD) (LCD) (80)
?	가
	

 ()

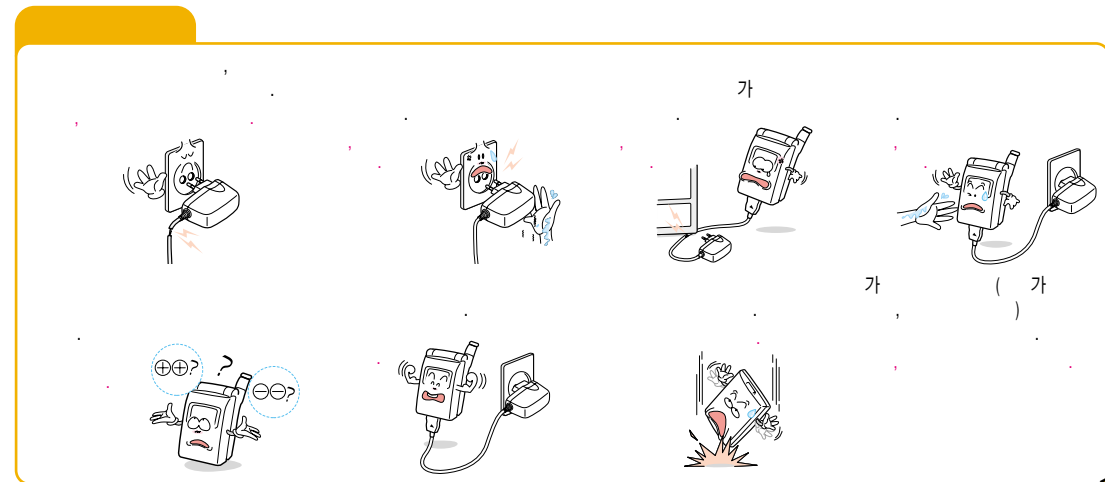



2000 12

가

SAR

1.6 W/Kg

2000-93 (SAR(Specific Absorption Rate)

Anycall LAND (<http://www.anycall.com>): EMF SAR
EMF (<http://www.emf.or.kr>) /
(<http://www.rri.go.kr>)
FCC (<http://www.fcc.gov/oet/rfsafety>) /
CTIA (<http://www.wow-com.com>)
FDA (<http://www.fda.gov/cdrh/consumer>) /
UK NRPB (<http://www.nrp.org.uk>)
WHO (<http://www.who.int/emf>)

2000-91 ()

가

가



가

가

가

가

() ()



()가

15cm

15cm

가

RF

(RF)

가

가 RF



가

가

가

가

가

-20°C ~ 50°C

80°C

 

 



 

가

() ()



()

가
가
가
가
가
가
가

 (HCU040FDK) (HCR080DDK)	 (HCU080DDK)	(USB) PC 2000, PC  (PCB080BBK) (PCB080RBK)	(3)  (AEP010SBK) (AEP040NSK)
 (CCR040SBK)	 (CCH080SBK)	(220V)  (TCH080KBK)	가 

	(TX) : 824.64 ~ 848.37 MHz / (RX) : 869.64 ~ 893.37 MHz
	: ± 300 Hz
(mm)	: 80 (L) × 44 (W) × 22 (H)
(± 1g)	: 98 g
	300 mW
	-20 ~ +50
	0 % ~ 95 %

		제 품 보 증 서		<div>1 6</div>	
<div>2000-21)</div>	(1588-7285,		CDMA2000	SCH-X800
1588-3366	가			SERIAL NO.	
14	7				
1 ()			(가 가)		
				1 2	
())	10			()	()
	1				
	1				
	가				
	가	3			
		4			
		5			
	가	가		가 10%	
가	가		가		
가		가			

: 가 ()

18

삼성애니콜 SCH-X800 기능요약카드

기 능	사용법(차례대로 누르세요.)
나만의 메뉴 등록하기	1. 2. 눌러 메뉴 선택, 눌러 등록할 기능 선택, 눌러 저장/해제 선택, 또는 눌러 이전 선택,
벨/진동/램프 선택	1. 2. 눌러 선택,
전화벨 소리 크기조절	1. 2. 또는 눌러 조절,
통화음 크기조절	1. 2. 또는 눌러 조절,
버튼소리 크기조절	1. 2. 눌러 조절,
모음표 설정값 변경하기	1. 2. 모음표가 입력/모음표보다 선택/모음표 선택,
모음표 설정/해제하기	1. 2. 눌러 설정/해제 선택,
비밀번호 변경	1. 2. 비밀번호 입력, 바꿀 비밀번호 입력, 바꿀 비밀번호 재입력,
자동 잠금 기능 설정/해제	1. 2. 눌러 자동잠금/수동잠금/해제중 선택,
매니 기능 설정/해제	1. 2. 같게 누름,



삼성애니콜 SCH-X800 기능요약카드

기 능

사용법(차례대로 누름)

기능	사용법(차례대로 누르세요.)
나만의 메뉴 등록하기	[], [], [] 눌러 메뉴 선택, [] 눌러 등록할 기능 선택, [], [] 눌러 저장할 번지 선택, [], [] 또는 [], [] 눌러 아이폰 선택, []
벨/진동/램프 선택	[], [], [] 눌러 선택, []
전화벨 소리 크기 조절	[], [], [] 또는 [], [] 눌러 조절, []
통화는 크기조절	통화중 [] 눌러 조절
버튼소리 크기조절	[] 눌러 조절
모닝콜 설정값 변경하기	[], [], [] 모닝콜시각 입력/모닝콜로디 선택/모닝콜간격 선택, []
모닝콜 설정/해제하기	[], [], [] 눌러 설정/해제 선택, []
비밀번호 변경	[], [], 비밀번호 입력, 바꿀 비밀번호 입력, 바꿀 비밀번호 재입력
자동 잠금 기능 설정/해제	[], [], [] 눌러 자동잠금/수동잠금/해제중 선택, []
메니 기능 설정/해제	[] 같게 누름







for Foreigner

Your Phone
Getting started
Basic Functions
Menu Functions






 
 



 
 
 







 
 



 
 

 
 




















 
 



 
 
 
 



































 













 

 

 

 
 

 


 



 

























 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
186
188
191
194

Your Phone can display all menus and messages in either Korean and English except the verbal prompts.

1. In Standby Mode, press the  key.
2. Press the  key to enter Menu Mode.
3. Press the  key.
4. Scroll to highlight **Korean** or **English**.
5. Press the  key.






 
 



 

 







 
 


 
 
 

 
 




















 
 



 
 
 
 



































 






















 































 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
기능

사용법(차례대로 누르세요.)

여러가지 벨소리 선택	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
새 스케줄 등록하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
등록한 스케줄 확인하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
스케줄 수정/추가/삭제하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
새 메모 입력하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
메모 확인/수정/삭제하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
메모 추가/삭제/모두삭제하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
최근 걸었던 번호로 전화걸기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
전화번호 저장	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
등록된 전화번호 보기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
저장된 전화번호로 걸기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 

기능

사용법(차례대로 누르세요.)

여러가지 벨소리 선택	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
새 스케줄 등록하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
등록한 스케줄 확인하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
스케줄 수정/추가/삭제하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
새 메모 입력하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
메모 확인/수정/삭제하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
메모 추가/삭제/모두삭제하기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
최근 걸었던 번호로 전화걸기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
전화번호 저장	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
등록된 전화번호 보기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 
저장된 전화번호로 걸기	 ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , 

Your Phone

Phone Layout



Key Functions



In Standby Mode, enters Start Menu Mode.
In menu mode, opens the options of the selected menu.



In Menu Mode, select the current menu or option.



In Standby Mode, quickly enters the appropriate menu as listed below:

- : Main menu mode.
- : **Phonebook** menu. Shows a list of the whole phonebook entries when held down.
- : **Voice** menu.
- : **Message Setup** menu. Allows you to quickly access your voice mail server when held down.



In Standby Mode, allows you to quickly connect to the **NATE** service.



Makes or answers a call.
In Standby Mode, recalls the last number dialed or received.



Deletes characters from the display.
In Menu Mode, returns to the previous menu level.



Ends a call. Also switches the phone on and off when held down.
In Menu Mode, cancels your input and returns to Standby Mode.



Enter numbers, letters and some special characters.



In Standby Mode, enters or exits the manner mode when held down.



In Standby Mode, locks the phone when held down.



(on the left side of the phone)
During a call, adjust the earpiece volume.
In Standby Mode, adjust the key and folder tone volume.
In Menu Mode, scroll through the menu options and phonebook memory.

Display Icons



Shows the received signal strength. The greater the number of bars, the better the signal strength.



Appears when a call is in progress.



Appears when service is not available. When it is displayed, you cannot make or receive calls.



Appears when you set an alarm/morning call.



Appears when you receive a new message.



Appears when the Manner mode is active or you set the phone to **Vibrate** when you receive a call in the **Bell/Vibrate** menu.



Appears when a new broadcasting message has been received.




Shows the level of your battery. The more bars you see, the more power you have left.


Using the Battery

Installing the Battery


1. Insert the battery into the slot at the back of the phone, and then press the battery until it snaps into place.
2. Place the battery cover on the back of the phone, and latch the cover by rotating its lock clockwise.

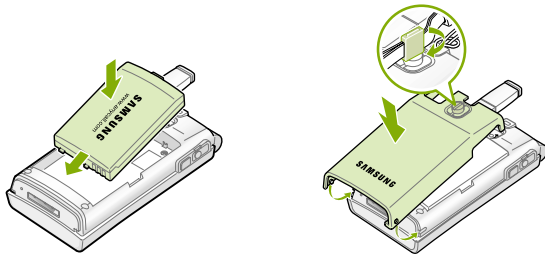

Removing the Battery

At first, turn the phone off by pressing the  key before removing the battery.

1. Rotate the lock on the battery cover counterclockwise to release the cover and lift the battery cover out of the phone, as shown.

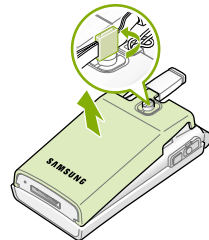


2. Remove the battery from the phone.

Charging the Battery


Charging With a Travel Charger

Note: The travel charger is optional item. If you want to charge the battery, you need to purchase it. Use only the approved travel charger. Ask your local Samsung dealer for further details.

Using the travel charger, you can use your phone while the battery is being charged, but this causes the phone to charge the battery more slowly.

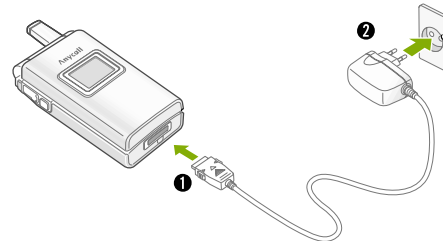


1. With the battery in position on the phone, plug the connector of the travel charger into jack at the bottom of the phone.
2. Plug the travel charger into a standard AC wall outlet. The LED on the charger indicates the charging progress as listed below:
 - Red: the battery is charging.
 - Green: the battery is completely charged.
3. When charging is finished, unplug the travel charger from the power outlet and from the phone by pressing the gray tabs on both sides of the connector and pulling the connector out.

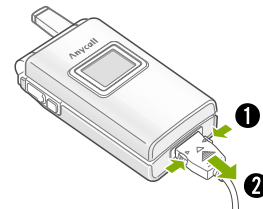


Charging With a Battery Charger

Using the battery charger, you can charge the battery alone.

1. Insert the battery alone into the slot of the battery charger, ensuring the terminals on the battery contacting with those on the charger and press the battery until it snaps into place.

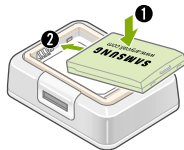

2. Plug the connector of the travel charger into the jack at the bottom of the battery charger.
3. Plug the travel charger into a standard AC wall outlet.

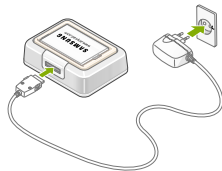


4. When charging is finished, unplug the travel charger from the power outlet and from the battery charger. Refer to step 3 on page 189.

Note: The LED on charger face into the ground.

5. Take the battery out of the battery charger.

Note: While charging the battery, you can stand the phone on the backside of the battery charger as shown below.

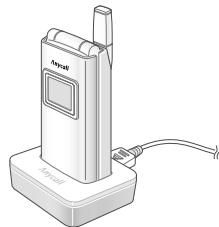


Switching the Phone On/Off

1. Open the phone.
2. Press and hold the  key until the phone switches on.

When your phone finds the network, the idle screen appears on each display. Now, you can make or receive a call.






3. To switch the phone off, press and hold the  key until the power-off image displays.

Basic Functions


Making a Call

1. Enter the area code and phone number.

Note: If you make a mistake, press the  key to clear a wrong digit. To clear the whole display, press and hold the  key.


2. Press the  key.

Ending a Call


When you want to finish your call, briefly press the  key. Or, close the phone.

Answering a Call


When a call comes in, the phone rings and displays the caller's phone number, if the Caller Line Identification service is available. For detailed information, contact your service provider.


When the phone is ringing, open the phone. If the phone is already open, press the  key.

Rejecting a Call

When the phone is ringing, press and hold the  key.


Adjusting the Volume


During a call, if you want to adjust the earpiece volume, press the  keys on the left side of the phone.

In Standby Mode, you can adjust the key and folder tone volume using the  keys.

Switching to the Whisper Mode


Whisper Mode automatically increases the microphone's sensitivity to allow the other person to hear your voice even though you may be whispering.


During a call, press and hold the  key to switch to the whisper mode.

To go back to the normal mode, press and hold the  key again. Or, when the call ends, the mode automatically turns off.


Quickly Switching to Manner Mode

Manner Mode is convenient when discretion is required and you wish to stop the phone from making any noise, in a theater or at a library for example.





In Standby Mode, to switch your phone quickly to the manner mode, simply press and hold the  key.

To exit the manner mode and reactivate the previous sound settings, press and hold the  key again.









Redialing the Last Number

To redial the last number you dialed, press and hold the  key.

To redial one of the number in the Call Records list:

1. In Standby Mode, press the  key.
2. Press the  or  key until you find a number you want to dial.
3. Press the  key.

Storing a Phone Number

1. In Standby Mode, enter a number and press the  key.
Or, after ending a call by pressing the  key, press the  key.
2. Select an icon to identify the category of the number to be stored and press the  key.
3. Enter a name. For further details about entering text, refer to "Entering Text" on page 194.
4. If necessary, press the  or  key to move to the desired input field and enter information about the person.
 - Home/Mobile/Work/Other/Fax: Enter various phone numbers. In the input box on the right side of each category, you can set the speed-dial number.
 - E-mail: Enter the person's e-mail address.
 - Group: Define the caller group to the entry.
 - Memo: Enter other information about the person.
5. Press the  key.
6. Press the  key to confirm storing the entry.

Speed-dialing


Once you have stored phone numbers in the phonebook with the speed-dial number (refer to the previous section), you can easily and quickly dial them, without needing to remember the numbers.

- For memory locations 001 ~009: Press and hold the last digit.
- For memory locations 000, 010~999: Press the first digit(s) of the phone number and hold down the last digit.


Four-digit Dialing

You can enter the last four consecutive digits of a phone number in Phonebook or Call Logs and your phone can dial the entire number for you.

You can quickly dial a phone number in Phonebook or Call Logs by entering its last four consecutive digits. Your phone automatically dials the phone number matching the four digits.

If there is more than one number that contains those digits, all of them are listed. Scroll to the number you want using the navigation keys and press the  key to dial.

Entering Text



To enter English words in a text input field, change the input mode to **A** (upper-case mode) or **a** (lower-case mode) by pressing the  key.

Press the keys labeled with the required letter:

- Once for the first letter
- Twice for the second letter
- And so on.

For example, press the **2** key three times to display the letter "C" and the **5** key two times to display the letter "K".

The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to automatically move to the right, and then enter the next letter.

To enter a symbol, select  from the input modes and scroll to a symbol using the navigation keys. Press the number on the left of the symbol. To exit symbol mode, press the  key.









To enter numbers only, select **1** from the input modes and press the number.



Menu Functions

Using the Menu

The phone offers a range of functions that allow you to tailor the phone to your needs. These functions are arranged in menus and sub-menus.

Example: Changing the display language to English

1. In Standby Mode, press the  key to access menu mode.
2. Press the  key to enter the **My Phone** menu.
3. Scroll with the  or  key to reach **/Language**.
4. Press the  key to enter the menu.
5. Scroll with the  or  key to highlight **English**.
6. Pressing the  key.

You can also use the index number to access the **/Language** menu function; press the  key for Start Menu Mode, the  key, the **7** key for **/Language**.

My Phone (the key + the key)

1. **Start Menu:** You can set up the start menu by registering or deleting menu functions.
1: Set/2: Delete/3: Reset
2. **Menu Screen:** You can change the display style of the menu mode.
1: Change Icon/2: Change Order/ 3: Set Color / 4: Theme Color/5: Icon List
3. **My Name:** You can enter your name to be displayed on the idle screen.
4. **Text Slide:** You can enter a greeting message to be displayed on the idle screen.
5. **Animation:** You can download images from the Internet and select an image to be displayed in various situations.
1: Standby Mode /2: Incoming Call/3: NATE Conn./ 4: Power On/5: Power Off/6: Delete Image/7: Select Clock

6. **Dialpad Size:** You can change the size of the number to be displayed when you enter a phone number to dial.

7. **/Language:** You can change the display language.

8. **Administrator:** You can manage various items downloaded from Internet.

1: Game/2: Music/3: Image/4: Media

1. Phonebook (the or key + 1)

1. **Find Number:** You can find the entries stored in the phonebook using voice dial tags, location numbers, names, numbers, group names, or time of call.
1: By Voice/2: By Location/3: By Name/4: By Number/ 5: By Group/6: By Time/7: **114
2. **Outgoing Call:** You can view the records of up to 100 of the last phone calls placed from your phone.
3. **Incoming Call:** You can view the records of up to 100 of the last phone calls placed to your phone.

4. **Missed Call:** You can view the records of up to 100 of the last phone calls you received but did not answer.
5. **Store Number:** You can add a new name entry. For details about storing a number, see page 193. You can store up to 1,000 names or 2,400 items in your Phonebook.
6. **Caller Alert:** If the caller line identification service is available, you can set the phone to alert you to an incoming call from a specific person by using a distinctive icon and ringer.
1: Edit Number/2: Set Number/3: Icon List
7. **Edit Group:** You can add a new group and edit or delete the existing groups.
8. **Number Plus:** Your phone can have two phone numbers and you can quickly and easily switch your service back and forth between the two numbers.
1: Set NumberPlus /2: Select Alert/ 3: Delete Number
9. **Delete All:** You can delete all of the phonebook entries.

#. **My Number:** You can view your phone number.

2. Music Box (the or key + 2)

1. **Bell/Vibrate:** You can specify how you are to be informed of any incoming calls.
2. **Bell/Melody:** You can select a melody or tone from several melodies.
1: Basic Bell /2: Exciting Melody/3: Mood Melody/
4: Event Melody/5: Music Bell/6: My Bell/7: My Melody
3. **Ring Volume:** You can adjust the ring volume.
4. **Key Tone Type:** You can select the tone that the keypad generates when you press a key.
5. **Period Alarm:** You can turn the alarm tone to sound every hour on or off.
6. **Theme Sound:** You can set your phone to sound when you configure any settings, and select the alert tone.

3. Internet/SMS (the or key + 3)

1. **NATE:** You can access the Internet service provided by your service provider.
1: Connect NATE/2: Connect playon/
3: playon/ 4: Multimedia/ 5: Write E-mail
2. **Message Setup:** You can send or receive SMS messages and view the messages.
1: Incoming/2: NATE Air/3: Outgoing/4: Message Box/
5: Message Log
3. **E-mail:** You can send or receive E-mail messages.
1: Read/2: Write/3: © Sent/4: © Draft/5: Configure
4. **Set Modem:** You can use the phone just like a modem on your PC, enabling you to use wireless data.
1: Alert Type/2: Auto Receive/3: Tx Rate
5. **Internet Setup:** You can program the Internet options.
1: Initial URL/ 2: Gateway/ 3: NATE E-mail/
4: Initialize

4. M Wallet (the or key + 4)

You can use the phone as the wallet. If you want to use this feature you are required to enter the password.

1. **User Info.:** You can enter the user's information.
1: User Name*/2: HHP Number*/3: Email Address/
4: Save Information
2. **Sign Info.:** You can enter the information of the credit card.
1: Card Information/2: Ok Cashbag Info.
3. **Delivery Info.:** You can enter the information of the delivery.
1: Basic Delivery/ 2: Add Delivery
4. **Password Chg.:** You can change the password.
5. **Cert Info.:** You can download the certifications from the NATE service. The certifications can protect user's information against an unauthorized use. You can also view the certifications in this option.
1: CA Cert./2: Private Cert.

5. Voice Dial (the or key + 5)

1. **Configure:** You can configure various voice dial settings.

► 1:VoiceDial Mode/2:Select Sex/3:Result Display/
4:Earmic Setup/5:Message Vol.

2. **Edit Name:** You can edit the voice dial name.

6. Organizer (the or key + 6)

1. **Morning Call:** You can set a morning call to wake you up every morning.

2. **Alarm:** You can set an alarm to ring at a specified time.

3. **Scheduler:** You can view the current month as well as the past or future month in calendar format. You can schedule up to 400 events and be alerted by the Scheduler function before an event begins.

4. **Memo:** You can make up to 99 memos of important things you need to remember.

5. **Calculator:** you can use the phone as a calculator.

6. **Worldtime:** You can use this menu option to find out what time it is in another part of the world.

7. **D-Day Plus:** You can know how much time it takes for you to do something or how many months, days, hours and minutes until a specific event occurs.

8. **Unit Change:** You can convert a value into the required unit, for example, inches to centimeters.

9. **Timer:** You can view the length of your calls and set the current date and time.

7. Anycall Land (the or key + 7)

1. **Push Push II:** You can enjoy the **Push Push II** game.

2. **Land Box:** You can access games downloaded from Anycall Land.

8. Setup (the or key + 8)

1. **Password Chg.:** You can change the phone password.

2. **Auto Dial:** You can set the phone to automatically add an area code or international code when you make a call.

1:Auto Area/ 2:International

3. **Restrict:** You can set the phone to reject incoming calls or restrict international calls. You can also set whether or not to display the caller's ID.

1:Privacy/ 2:Incoming/ 3:International/ 4:Caller ID

4. **Light/LCD:** You can select whether or not the phone uses the backlight or how long the backlight is on. You can also adjust the brightness of the external LCD.

1:B. light Time/2:B. light Setup/3:Contrast
/4:Front B/L Time/5:Service Alert

5. **System:** When you travel abroad, you need to change to an appropriate system to make and receive phone calls. Contact your service provider, for further details.

1:SKTelecom/2:OTA-Auto. ROAM/3:A-BAND ROAM/
4:B-BAND ROAM

6. **Rejection:** You can set how to reject an incoming call; LCD and Auto Answer.


7. **Call Answer:** You can set how to answer an incoming call; Open Folder and Press Key

*. **Reset Phone:** You can reset the phone setting.
Reset Function/ Reset All

#. **Lock Phone:** You can lock the phone.

Auto Lock/ Manual Lock/ Cancel

Options During a Call

(the  key during a call)

- 1. **Phonebook:** Refer to “Phonebook” on page 195.
- 2. **Message Setup:** Refer to “Internet/SMS” on page 197.
- 3. **Mute Mic.:** You can turn the microphone off so that the other person cannot hear you.
- 4. **Key Tone Off:** You can press keys without hearing annoying key tones during a call.
- 5. **Send Phone #:** You can send the DTMF (Dual-Tone Multi- Frequency) tones of your phone number.

Talk:Send DTMF: You can send the DTMF tones of the currently displayed number.

Serial Number)가

(ESN : Electronic

10,200347

가가

1.

2.

1.

2.

가

()

Licensed by QUALCOMM Incorporated under one or more of the following Patents.

U.S. Patent No. 4,901,307 5,056,109 5,099,204

5,101,501 5,103,459 5,107,225

5,109,390